



ASSEMBLY & INSTALLATION INSTRUCTIONS

B407


PROCESSION OUTDOOR SCONCES 403046, 403052, 403061 & 403087

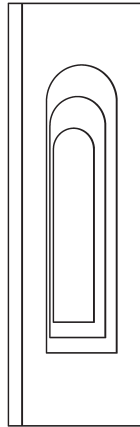

403046

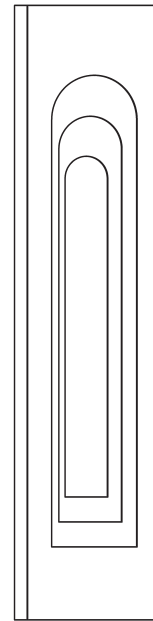


403087

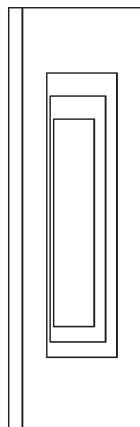

403052

 Instructions cover all versions



403061



HUBBARDTON FORGE.

MODERN AMERICAN BLACKSMITHS | FINE, HAND CRAFTED LIGHTING
CASTLETON, VERMONT USA | HUBBARDTONFORGE.COM

43371 Rev B

1 OF 8

ASSEMBLY & INSTALLATION INSTRUCTIONS

B407

PROCESSION OUTDOOR SCONCES 403046, 403052, 403061 & 403087

Component Parts

- A Front Plate Assembly**
- B Top Plate**
- C Backplate**
- D Accent Plate 1**
- E Accent Plate 2**
- F Rubber Washer**
- G Mounting Bracket**
- H #10 Screws (8)**
- I #8 Screws (12)**
- J Glass Shield (2)**
- K Anchor (8)**
- L Ground Screw**
- M Cupped Washer**
- N Socket (2)**
- O Bulb (2)**
- P Threaded standoff (2)**
- Q Diffuser**
- R Retaining cup (2)**



HUBBARDTON FORGE.

MODERN AMERICAN BLACKSMITHS | FINE, HAND CRAFTED LIGHTING
CASTLETON, VERMONT USA | HUBBARDTONFORGE.COM

43371 Rev B

2 OF 8

ASSEMBLY & INSTALLATION INSTRUCTIONS

B407

PROCESSION OUTDOOR SCONCES 403046, 403052, 403061 & 403087

CAUTION: FAILURE TO INSTALL THIS FIXTURE PROPERLY MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH AND PROPERTY DAMAGE. We recommend installation by a licensed electrician. This product must be installed in accordance with applicable installation code(s), by a person familiar with the construction and operation of the product and the hazards involved.*

Caution: Do not exceed maximum wattage noted on fixture. Use only recommended bulbs with fixture.


Prepare Fixture for Installation *(Figure 1)*

1. Carefully unpack the fixture from the carton.
2. Remove plastic wrap and separate the mounting bracket (G) from the fixture and set aside.
3. Remove (2) #8 screws (I) that secure the top plate (B). Remove top plate and set aside.
4. Remove (4) #8 (I) screws that hold the front plate assembly (A) on to the backplate (C). Remove front plate assembly (A) and set aside.
5. Remove (4) #8 (I) screws that hold accent plate 1 (D) on. Set aside accent plate 1 (D) and screws.
NOTE: Be sure to maintain correct orientation of the plates for reinstallation.
6. Remove (4) #8 (I) screws that hold accent plate 2 (E) on. Set aside accent plate 2 (E) and screws.
7. Remove the (2) threaded standoffs (P) at the bottom of the backplate (C).

ASSEMBLY & INSTALLATION INSTRUCTIONS

B407

PROCESSION OUTDOOR SCONCES 403046, 403052, 403061 & 403087

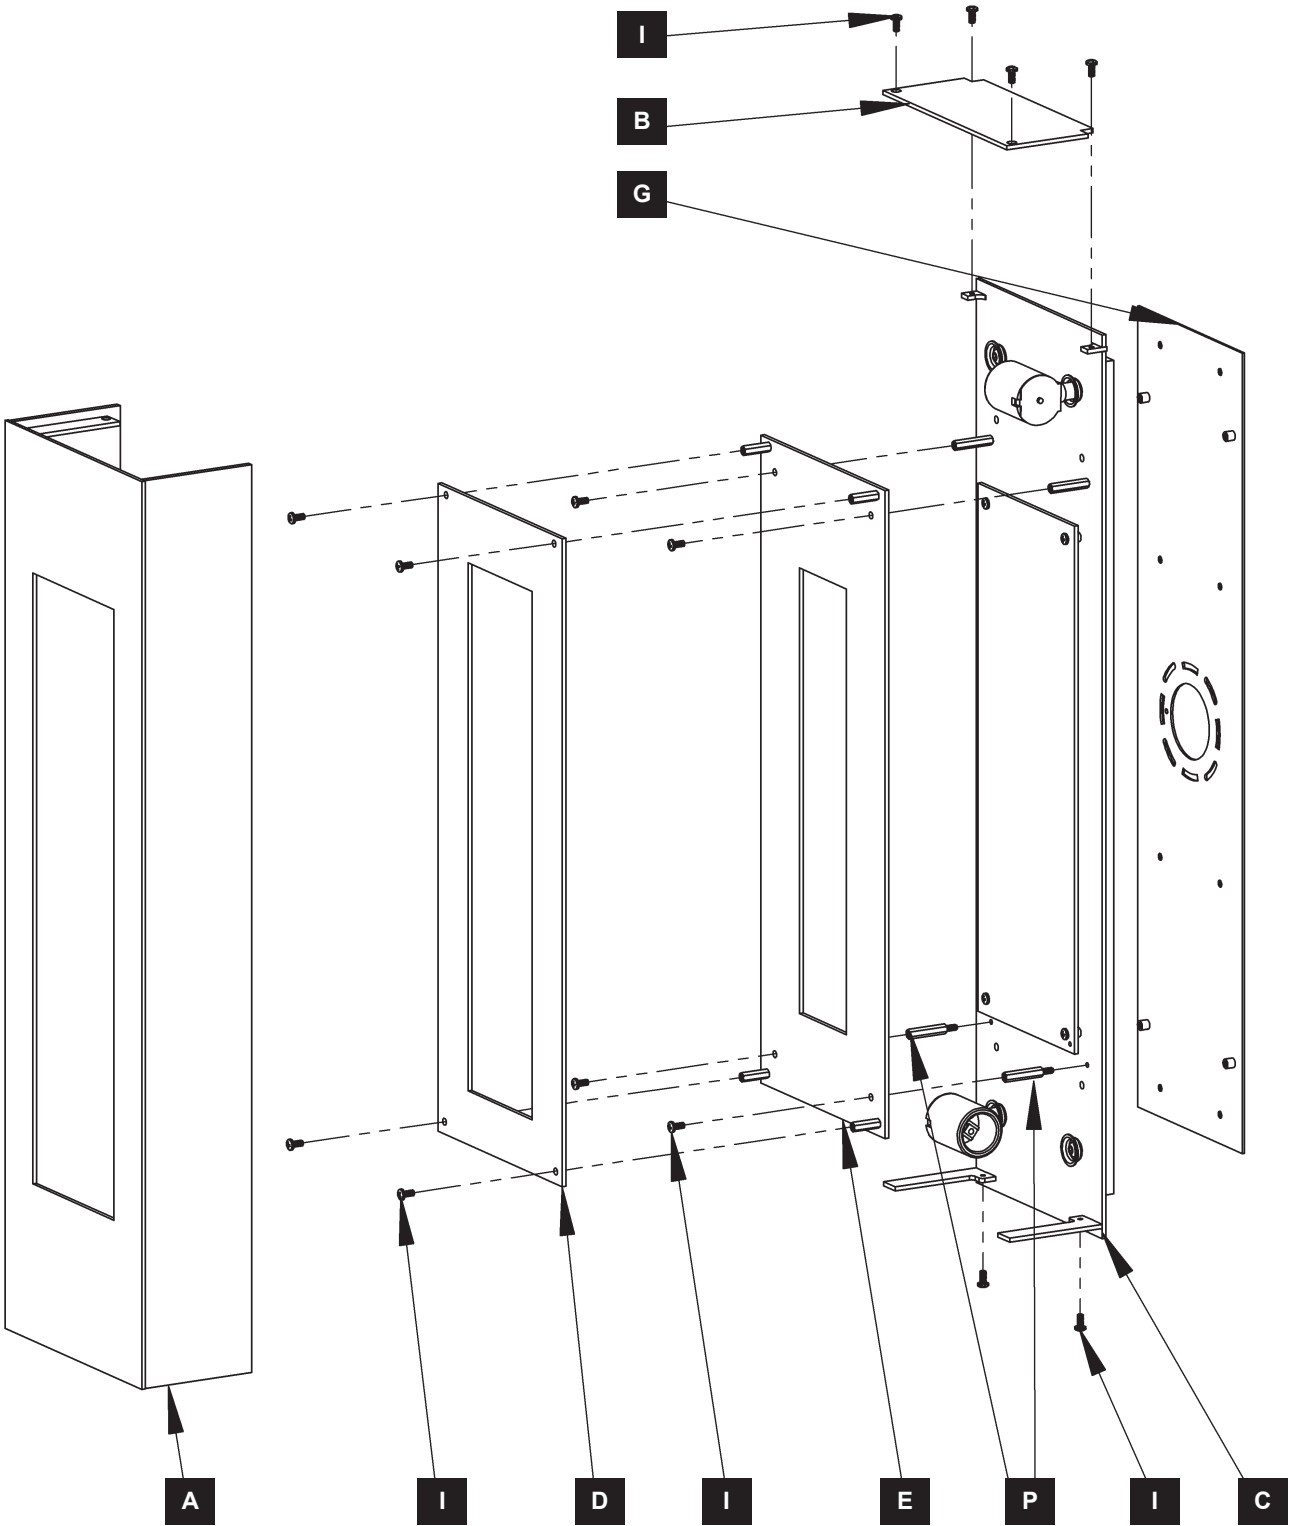

(Figure 1)

ASSEMBLY & INSTALLATION INSTRUCTIONS

B407

PROCESSION OUTDOOR SCONCES 403046, 403052, 403061 & 403087

To Install Fixture (Figures 2 & 3)

1. Place the mounting bracket (G) over the electrical box being sure to hold it level. Line up holes in mounting bracket with holes in electrical box. With a pencil, mark the location of all mounting holes in the mounting bracket on the wall behind. Set bracket aside.
2. Drill 1/4" holes in the locations marked on the wall. Place the tapered end of the anchors (K) into the holes and gently tap them flush to the wall using a light weight hammer.
3. Thread the wires in the electrical box through the hole in the mounting bracket (G) while moving the bracket into position. Using two machine screws (not provided) attach mounting bracket (G) to the electrical box.

Note: A new electric box comes with screws. When replacing a fixture, retain the existing screws for use with the new fixture.

4. Using #10 screws (H), screw the mounting bracket securely to the wall. Be careful not to over-tighten or strip the anchors (K).
5. Attach a pigtail lead to the mounting bracket (G) using the ground screw (L) and cupped washer (M) found in kit bag.
6. Hold the backplate (C) close to the mounting bracket (G) and using suitable wire connectors (not provided), connect fixture wires to supply wire (white to white and black to black). Connect all ground wires (bare copper or green to bare copper or green).

CAUTION: MAKE SURE WIRE CONNECTORS ARE TWISTED ON SECURELY, AND NO BARE WIRES ARE EXPOSED.

7. Apply a generous bead of a suitable caulking material (not provided) to caulking lip on the backplate (C). Caulk should be applied around the entire perimeter of the backplate (Figure 3).
8. Carefully tuck all wires behind backplate and inside the mounting bracket (G). Place backplate firmly onto bracket and fasten with (4) 8-32 screws (I) and rubber washers (F).

Note: Be sure no wires are pinched between wall and fixture.



HUBBARDTON FORGE.

MODERN AMERICAN BLACKSMITHS | FINE, HAND CRAFTED LIGHTING
CASTLETON, VERMONT USA | HUBBARDTONFORGE.COM


43371 Rev B

5 OF 8


ASSEMBLY & INSTALLATION INSTRUCTIONS

B407

PROCESSION OUTDOOR SCONCES 403046, 403052, 403061 & 403087

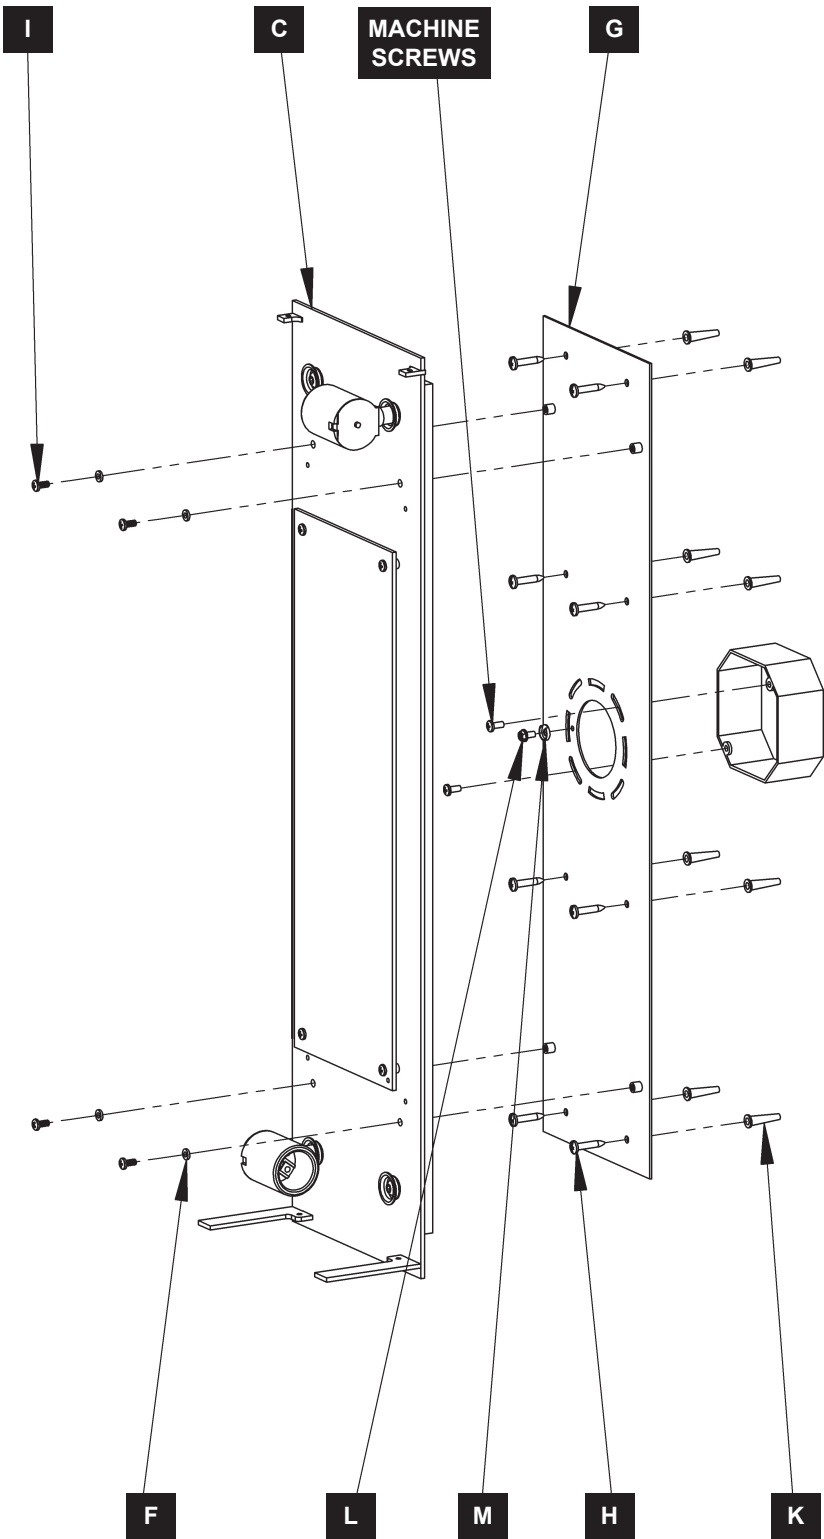

(Figure 2)

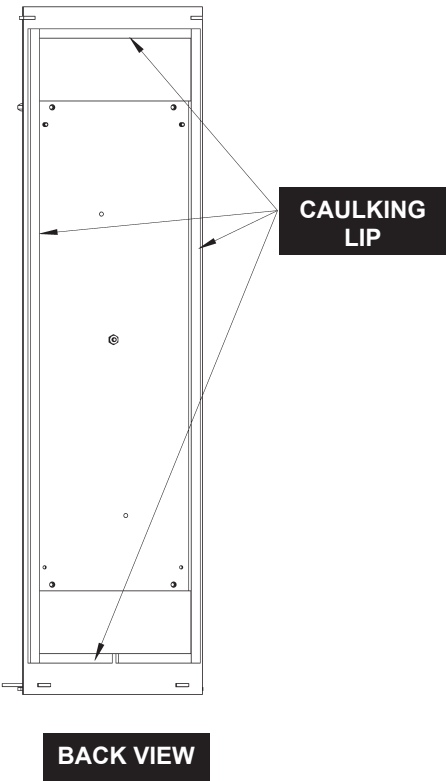

(Figure 3)

ASSEMBLY & INSTALLATION INSTRUCTIONS

B407

PROCESSION OUTDOOR SCONCES 403046, 403052, 403061 & 403087

To Complete Installation *(Figure 4)*

1. Install bulbs (O) into sockets (N).
2. Locate the two glass shields (J) and slide over the sockets (N) and retaining cups (R).
3. Slide glass diffuser (Q) onto arms on the bottom of the backplate (C).
4. Reinstall threaded standoffs (P) into backplate (C).
5. Reinstall accent plate 2 (E) onto backplate (C) using (4) #8 screws (I). Applied supplied grease to threads on the screws
6. Reinstall accent plate 1 (D) onto accent plate B (E) using (4) #8 screws (I). Applied supplied grease to threads on the screws.
7. Slide front plate assembly (A) on to tabs on backplate (C). Secure with (4) #8 screws (I). Applied supplied grease to threads on the screws.
8. Place top plate (B) on top of fixture and secure with (2) #8 screws (I). Applied supplied grease to threads on the screws.
9. Restore electricity at main breaker.



HUBBARDTON FORGE.

MODERN AMERICAN BLACKSMITHS | FINE, HAND CRAFTED LIGHTING
CASTLETON, VERMONT USA | HUBBARDTONFORGE.COM

43371 Rev B

7 OF 8

B407

This exploded view diagram illustrates the assembly of a cabinet. The components are labeled as follows:

- A:** The main cabinet body.
- B:** A horizontal panel or shelf.
- D:** A vertical panel or door.
- E:** Another vertical panel or door.
- I:** A small vertical component, possibly a hinge or pin.
- J:** A rectangular component, likely a drawer or a small cabinet.
- O:** A circular component, possibly a knob or a lock.
- P:** A horizontal panel or shelf.
- Q:** A horizontal panel or shelf.
- R:** A circular component, possibly a knob or a lock.

The diagram shows the relative positions and alignment of these components, with dashed lines indicating the assembly path and the final assembled state.

**** Hubbardton Forge will not be liable for injury or damage caused by improper installation, lamping or use of this fixture.***



8 OF 8