


ASSEMBLY & INSTALLATION INSTRUCTIONS

A937

Cityscape Linear Pendant 139726

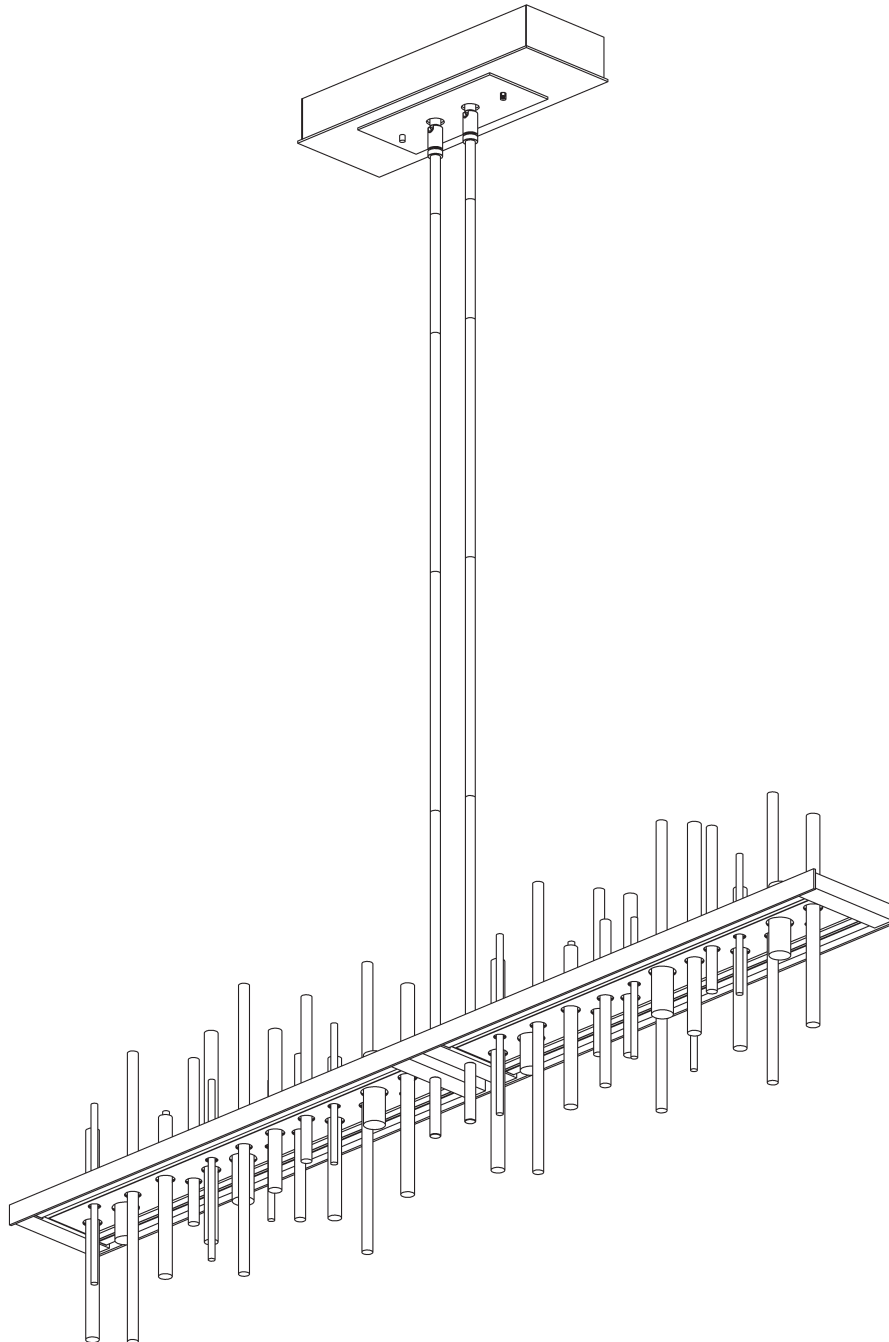

HUBBARDTON FORGE.

MODERN AMERICAN BLACKSMITHS | FINE, HAND CRAFTED LIGHTING
CASTLETON, VERMONT USA | HUBBARDTONFORGE.COM

52591

1 OF 6

Component Parts

- A Fixture**
- B Canopy**
- C Wood Screws (4)**
- D Mounting Plate**
- E Swivel Assembly (2)**
- F Hex Nut (4)**
- G Stud (4)**
- H 3" Fixture Pipe (2)**
- I 6" Fixture Pipe (2)**
- J 12" Fixture Pipe (6)**
- K Stem Nipples (10)**
- L Safety Cable(1)**
- M #8 Screw**
- N Threaded Stud (2)**
- O Barrel Knobs (2)**
- P Ground Screw**
- Q Cupped Washer**
- R Bracket (2)**
- S Wide Assembly (4)**
- T Narrow Assembly (2)**
- U Light Guide (2)**



ASSEMBLY & INSTALLATION INSTRUCTIONS

A937

Cityscape Linear Pendant 139726

CAUTION: FAILURE TO INSTALL THIS FIXTURE PROPERLY MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH AND PROPERTY DAMAGE. We recommend installation by a licensed electrician. This product must be installed in accordance with applicable installation code(s), by a person familiar with the construction and operation of the product and the hazards involved.*

Caution: Do not exceed maximum wattage noted on fixture. Use only recommended bulbs with fixture.

Please Note: After installation extra hardware and accessories are possible due to our kits are used on multiple products and options.

To Install Fixture (Figure 1) on following page

CAUTION: BE SURE POWER IS OFF AT THE MAIN BREAKER BOX PRIOR TO INSTALLATION.

1. Carefully unpack canopy the carton.
2. Using two machine screws (not provided), fasten the mounting plate (D) to the electric box.

Note: A new electric box comes with screws. When replacing a fixture, retain the existing screws for use with the new fixture.

3. Using wood screws (C) attach mounting plate (D) to a structural member in the ceiling, centering the plate over the outlet box. Wood screws are supplied with your fixture; however, different materials and/or construction methods may require different fasteners. If in doubt, contact a qualified electrician.

Note: Additional holes may need to be drilled in the mounting plate to allow screws to be secured to a structural member.

Caution: Installer must ensure that the mounting method is capable of supporting the weight of the fixture.

4. Locate fixture pipes (H,I,J), fixture (A), stem nipples (K). Stem nipples (K) can be found in the kit bag.
5. Provided are multiple fixture pipes in three different lengths. Choose the combination that will achieve the overall height desired. Refer to the table below to determine the pipes required to reach the desired overall height. Once you have determined the components necessary, feed the wires that exit fixture (A) through the individual components and thread pipes and couplings together. Wires will slip easier through loose components than through pipes and couplings that are pre-assembled. Once wires are run, apply thread locking compound to all the connection points and assemble the pipes and nipples.

		15.5	18.5	21.5	24.5	27.5	30.5	33.5	36.5	39.5	42.5	45.5	48.5	51.5	54.5	57.5
# of Pipes Required	3" Pipe (H)	1		1		1		1		1		1		1		1
	6" Pipe (I)		1	1			1	1			1	1			1	1
	12" Pipe (J)				1	1	1	1	2	2	2	2	3	3	3	3

NOTE: APPLICATION OF THE THREAD LOCKING COMPOUND IS NECESSARY TO PREVENT THE PIPE FROM LOOSENING DURING REGULAR MAINTENANCE AND CLEANING OF THE FIXTURE. BE CERTAIN TO APPLY THE COMPOUND.

6. Repeat repeat steps 5 & 6 for second set of pipes.
7. Carefully slide canopy (B) over wires and fixture pipes (H, I & J) until it rests on top of fixture (A).
8. Slip wires from the fixture (A) through swivel assembly (E) and thread swivel into fixture pipe.
9. Ensure that slots on swivels (E) are aligned as shown.
10. Raise assembled fixture (A) to the ceiling and attach to mounting plate (D) thread hex nuts (F) onto studs (G).

ASSEMBLY & INSTALLATION INSTRUCTIONS

A937

Cityscape Linear Pendant 139726

11. If fixture (A) requires leveling adjust the hex nuts (F) holding the brackets (R) to the mounting plate (D). See Figure 2
12. Once fixture is level adjust the upper nut (F) so it rests against the bracket (R). Tighten all nuts (F).
13. Raise Canopy (B). Connect Safety Cable (L) from canopy (B) to mounting plate (D) using #8 screw (M) that ships in the mounting kit bag.

Safety cable (L) is used to temporarily suspend canopy while wiring connections are made.

14. The LED Driver OUTPUT wires are red and blue (or black) and are shipped with connectors attached. Connect the red wires from the fixture to the red wires from the driver using this connector. Repeat the same for the blue wires. Blue to blue or blue to black.

WARNING: Do not connect red and blue fixture wires to mains voltage, as this can damage LEDs and void warranty coverage.

15. Using ground screw (P) and cupped washer (Q) that ship in mounting kit bag, run a pigtail lead from mounting plate (D) to the junction box. Connect all ground wires (bare copper or green to bare copper or green). Push wires back into outlet box.
16. Using suitable wire connectors (not provided) connect Driver INPUT wires to mains supply wires (white to white and black to black).

CAUTION: MAKE SURE WIRE CONNECTORS ARE TWISTED ON SECURELY, AND NO BARE WIRE IS EXPOSED.

17. Raise canopy (B) and push firmly to ceiling, making sure that no wires are pinched between canopy (B) and ceiling.
18. Studs (N) ship attached to barrel knobs (O). Screw studs (N) into standoffs on mounting plate (D) to secure canopy (B).
19. Follow instructions to install decorative assemblies.



HUBBARDTON FORGE.

MODERN AMERICAN BLACKSMITHS | FINE, HAND CRAFTED LIGHTING
CASTLETON, VERMONT USA | HUBBARDTONFORGE.COM


52591

4 OF 6


ASSEMBLY & INSTALLATION INSTRUCTIONS

Cityscape Linear Pendant 139726

A937

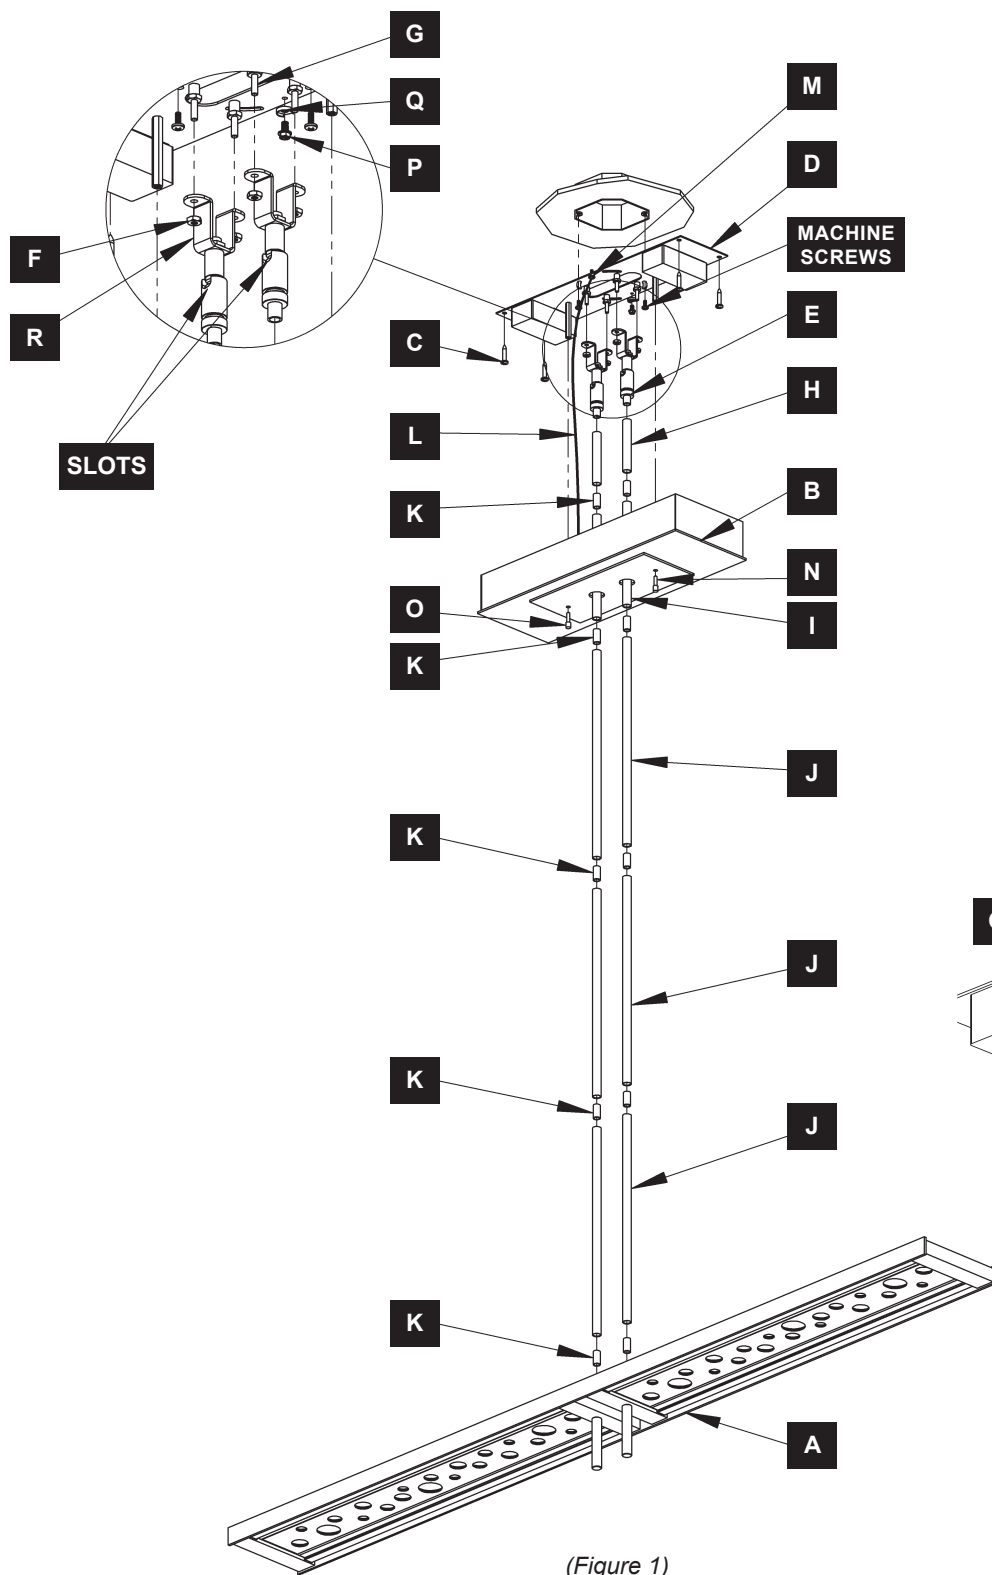

(Figure 1)

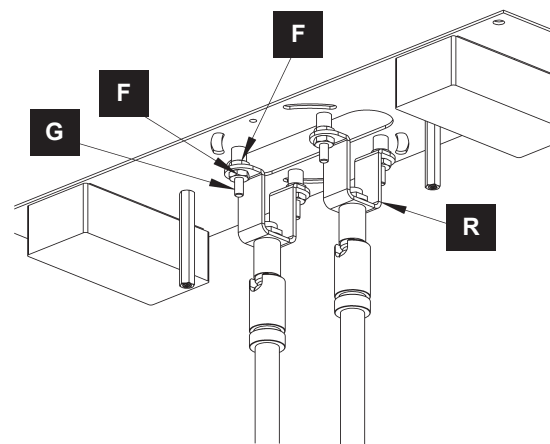

(Figure 2)



HUBBARDTON FORGE.



MODERN AMERICAN BLACKSMITHS | FINE, HAND CRAFTED LIGHTING
CASTLETON, VERMONT USA | HUBBARDTONFORGE.COM

52591

5 OF 6

To Install Decorative Assemblies (Figure 3 & 4)

1. Sort decorative assemblies into two sets. One side of the fixture (A) will use (2) wide assemblies (S) and (1) narrow assembly (T).
2. Align assemblies (S & T) with holes in light guide (U). Install assemblies into light guide (U) with welds facing down.
3. Repeat on other side of fixture (A).
4. Restore electricity at main breaker.

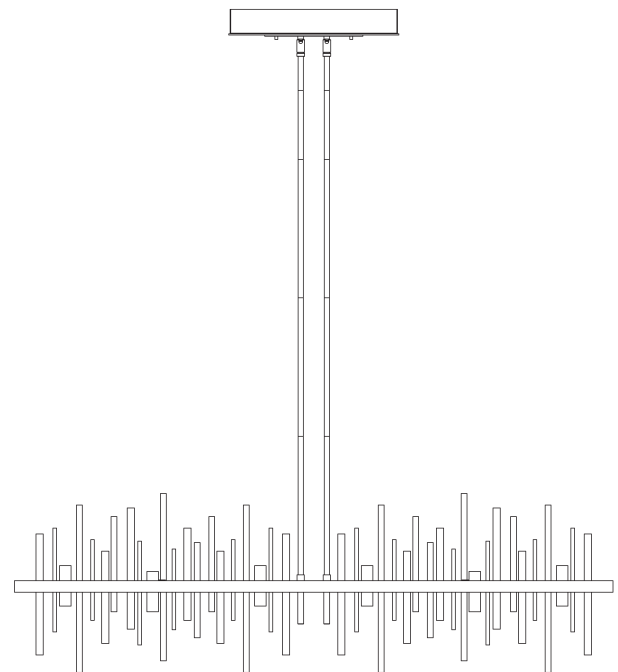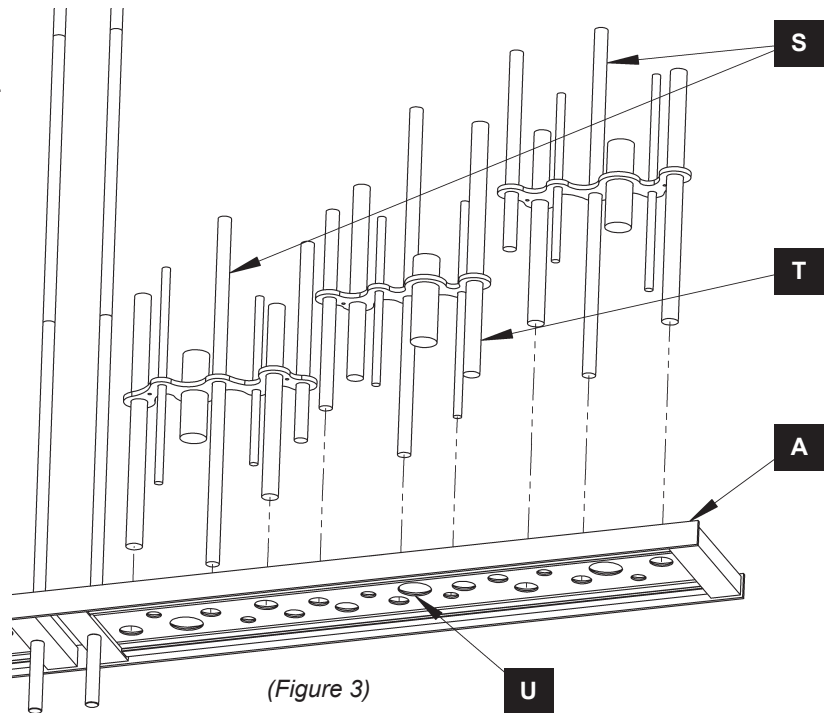

If you need further assistance, or find that you are missing any parts, please contact the dealer from which you purchased this product. We hope you enjoy your fixture!

*** Hubbardton Forge will not be liable for injury or damage caused by improper installation, lamping or use of this fixture.**