


# ASSEMBLY & INSTALLATION INSTRUCTIONS

A956

Henry Outdoor Pendant with Glass Medium 363009

---

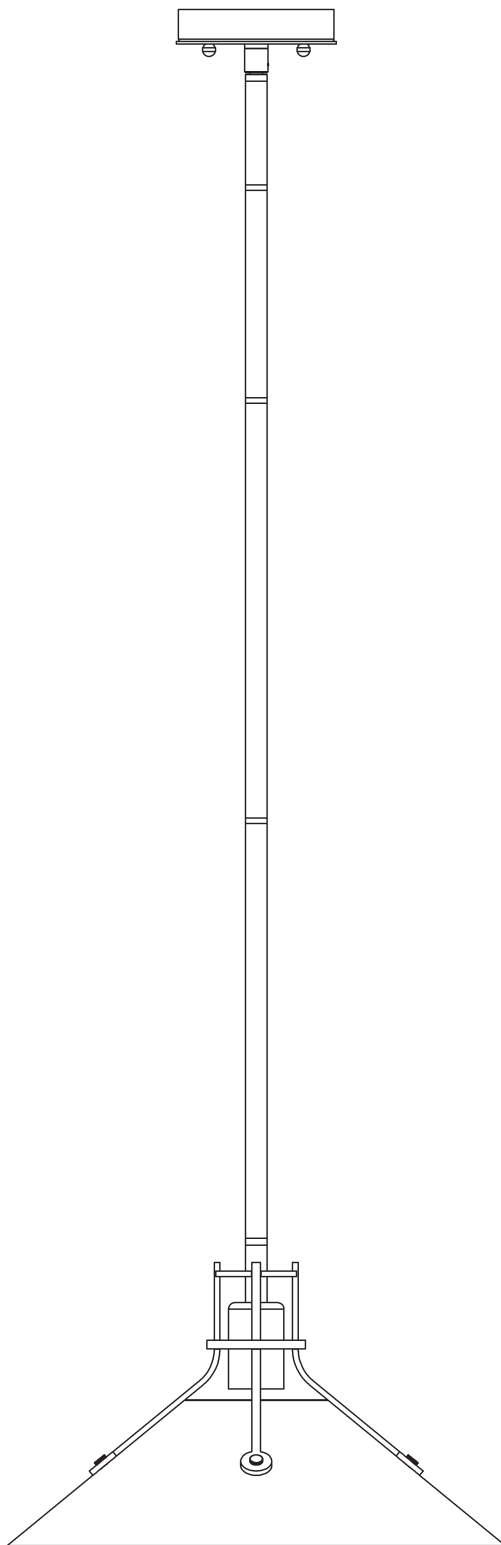

HUBBARDTON FORGE.

MODERN AMERICAN BLACKSMITHS | FINE, HAND CRAFTED LIGHTING  
CASTLETON, VERMONT USA | HUBBARDTONFORGE.COM

52610

1 OF 5

# ASSEMBLY & INSTALLATION INSTRUCTIONS

A956

Henry Outdoor Pendant with Glass Medium 363009

---

## Component Parts

|          |                                 |
|----------|---------------------------------|
| <b>A</b> | <b>Fixture</b>                  |
| <b>B</b> | <b>Fixture Coupling</b>         |
| <b>C</b> | <b>Canopy</b>                   |
| <b>D</b> | <b>Crossbar</b>                 |
| <b>E</b> | <b>Ground Screw</b>             |
| <b>F</b> | <b>Threaded Stud (2)</b>        |
| <b>G</b> | <b>Knurled Ball (2)</b>         |
| <b>H</b> | <b>3" Fixture Pipe (1)</b>      |
| <b>I</b> | <b>6" Fixture Pipe (1)</b>      |
| <b>J</b> | <b>12" Fixture Pipe (2)</b>     |
| <b>K</b> | <b>Single Pipe Coupling (2)</b> |
| <b>L</b> | <b>Double Pipe Coupling (3)</b> |
| <b>M</b> | <b>Glass Shade</b>              |
| <b>N</b> | <b>Thumb Screw (4)</b>          |
| <b>O</b> | <b>Barrel Nut (4)</b>           |
| <b>P</b> | <b>Socket</b>                   |
| <b>Q</b> | <b>Bulb (Not Included)</b>      |
| <b>R</b> | <b>Gasket</b>                   |



HUBBARDTON FORGE.

MODERN AMERICAN BLACKSMITHS | FINE, HAND CRAFTED LIGHTING  
CASTLETON, VERMONT USA | HUBBARDTONFORGE.COM

# ASSEMBLY & INSTALLATION INSTRUCTIONS

A956

## Henry Outdoor Pendant with Glass Medium 363009

**CAUTION: FAILURE TO INSTALL THIS FIXTURE PROPERLY MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH AND PROPERTY DAMAGE.** We recommend installation by a licensed electrician. This product must be installed in accordance with applicable installation code(s), by a person familiar with the construction and operation of the product and the hazards involved.\*

**Caution:** Do not exceed maximum wattage noted on fixture. Use only recommended bulbs with fixture.

**Caution:** Damp location outdoor hanging fixtures are designed for use in covered spaces such as porches protected from prolonged exposure to water and wind. If installing in locations subject to wind the use of supplementary chains, cables, or similar restraints may be necessary to protect against swinging and twisting. If in doubt consult a qualified installer.

Please Note: After installation extra hardware and accessories are possible due to our kits are used on multiple products and options.


### To Prepare Fixture (Figure 1)

**CAUTION: BE SURE POWER IS OFF AT THE MAIN BREAKER BOX PRIOR TO INSTALLATION.**

1. Carefully unpack fixture (A) and glass shade (M) from the carton.
2. Unscrew thumb screw (N) and barrel nut (O) from fixture (A). Repeat for all thumb screws.
3. Carefully place fixture (A) onto glass shade (M) and line up holes.
4. Insert barrel nut (O) under glass shade (M) and thread thumb screw (N) from top side of fixture (A).

**Note:** Do not completely tighten thumb screw (N) and barrel nut (O) until all four are in place.

5. Repeat step 4 in a criss-cross pattern until all thumb screws (N) and barrel nuts (O) are in place.
6. Hand tighten the thumb screws (N) to secure glass shade (M) to fixture (A).
7. Follow steps on next page to complete installation.

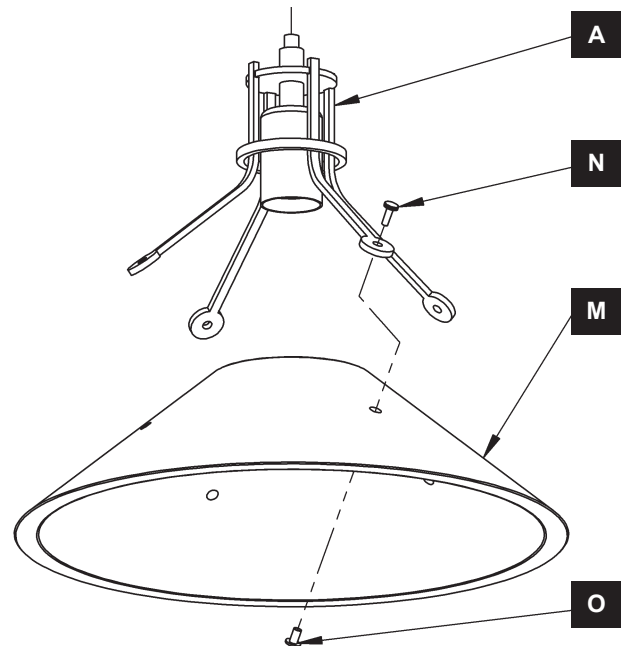

(Figure 1)

# ASSEMBLY & INSTALLATION INSTRUCTIONS

A956

Henry Outdoor Pendant with Glass Medium 363009

## To Install Fixture (Figure 2, on following page)

**CAUTION:** BE SURE POWER IS OFF AT THE MAIN BREAKER BOX PRIOR TO INSTALLATION.

1. Carefully unpack the fixture (A) from the carton.
2. Feed supply wires through the center of the crossbar (D) with ground screw (E) facing down. Using two machine screws (not provided), fasten the crossbar (D) to the electric box.

**Note:** A new electric box comes with screws. When replacing a fixture, retain the existing screws for use with the new fixture.

3. Thread studs (F) through appropriate holes in crossbar (D) to match holes in canopy (C).
4. Locate fixture pipes (H, I, J), fixture (A) and couplings (K & L). Couplings are shipped threaded into the pipes (H, I, J). Unthread couplings from the pipes.
5. Provided are multiple fixture pipes in three different lengths. Choose the combination that will achieve the overall height desired. Refer to the table below to determine the pipes required to reach the desired overall height. Once you have determined the components necessary, feed the wires that exit the fixture coupling (B) through the individual components. Wires will slip easier through loose components than through pipes and couplings that are pre-assembled.

|                     |              | Overall Height of Fixture |      |      |      |      |      |      |      |      |      |      |
|---------------------|--------------|---------------------------|------|------|------|------|------|------|------|------|------|------|
|                     |              | 14.5                      | 17.5 | 20.5 | 23.5 | 26.5 | 29.5 | 32.5 | 35.5 | 38.5 | 41.5 | 44.5 |
| # of Pipes Required | 3" Pipe (H)  | 1                         |      | 1    |      | 1    |      | 1    |      | 1    |      | 1    |
|                     | 6" Pipe (I)  |                           | 1    | 1    |      |      | 1    | 1    |      |      | 1    | 1    |
|                     | 12" Pipe (J) |                           |      |      | 1    | 1    | 1    | 1    | 2    | 2    | 2    | 2    |

6. Apply a drop of the supplied thread locking compound to the internal threads of fixture coupling (B) and pipe couplings (K, L). Thread pipes (H, I & J) and pipe couplings (K, L) together. The single pipe coupling (K) will thread on the end of the pipe that will be attached to the canopy (C).

**Note:** Application of the thread locking compound is necessary to prevent the stem from loosening during regular maintenance and cleaning of the fixture. Be certain to apply the compound.

7. Thread pipe assembly on to the fixture coupling (B).
8. Feed wires through the canopy (C).
9. Thread canopy (C) onto fixture pipe assembly.
10. Raise fixture close to ceiling.
11. Refer to instructions on next page to continue installation.



HUBBARDTON FORGE.

MODERN AMERICAN BLACKSMITHS | FINE, HAND CRAFTED LIGHTING  
CASTLETON, VERMONT USA | HUBBARDTONFORGE.COM

52610

4 OF 5

# ASSEMBLY & INSTALLATION INSTRUCTIONS


A956

## Henry Outdoor Pendant with Glass Medium 363009

12. Using suitable wire connectors (not provided) connect fixture wires to supply (white to white and black to black). Attach a pigtail lead to the crossbar ground screw (E). Connect all ground wires (bare copper or green to bare copper or green).

**CAUTION: MAKE SURE WIRE CONNECTORS ARE TWISTED ON SECURELY, AND NO BARE WIRE IS EXPOSED.**

13. Slide canopy (C) over threaded studs (F) and push firmly to ceiling, making sure that no wires are pinched between canopy (C) and ceiling. Fasten with knurled balls (G). Be sure studs (F) are fully seated in the knurled balls (G).
14. Install gasket (R) onto bulb (Q) (not Included), then install bulb into socket (P).
15. Restore electricity at the main breaker

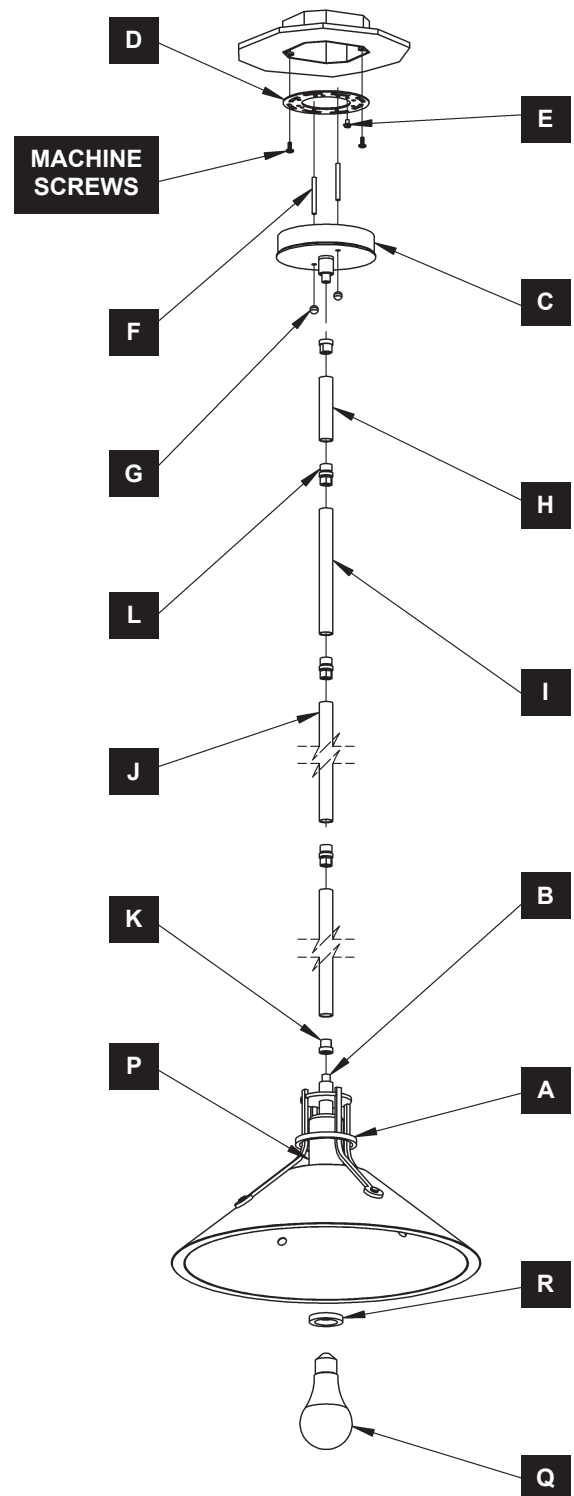

(Figure 2)

If you need further assistance, or find that you are missing any parts, please contact the dealer from which you purchased this product. We hope you enjoy your fixture!

*\*Hubbardton Forge will not be liable for injury or damage caused by improper installation, lamping or use of this fixture.*