


ASSEMBLY & INSTALLATION INSTRUCTIONS

A813

Brindille Drum Shade Pendant 137665

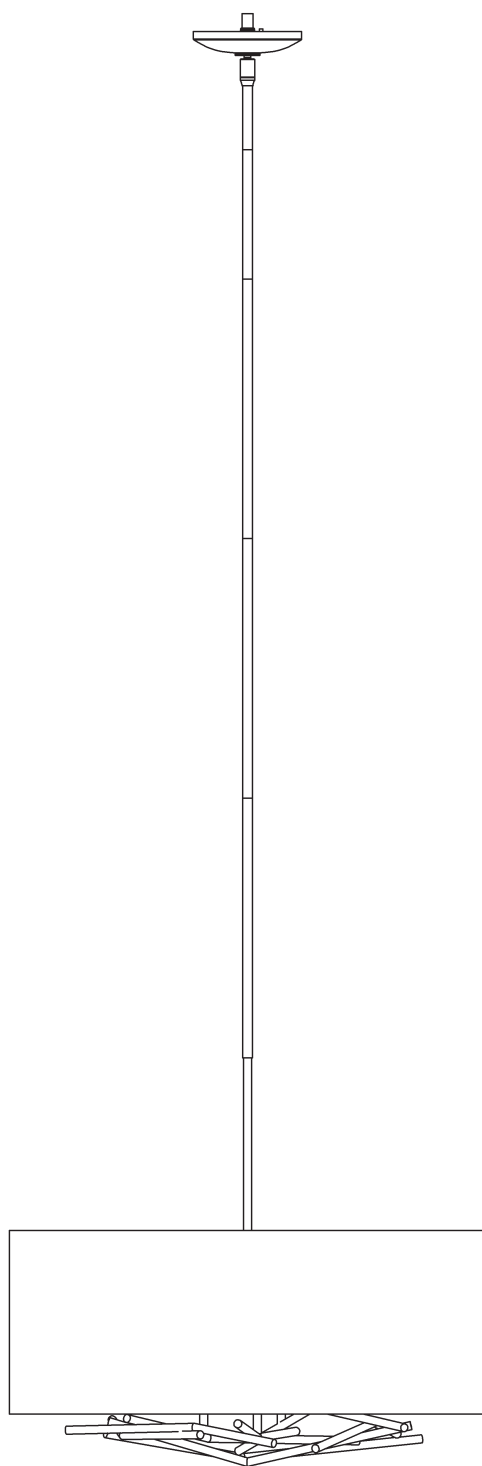

HUBBARDTON FORGE.

MODERN AMERICAN BLACKSMITHS | FINE, HAND CRAFTED LIGHTING
CASTLETON, VERMONT USA | HUBBARDTONFORGE.COM

50432

1 OF 6

ASSEMBLY & INSTALLATION INSTRUCTIONS

A813

Brindille Drum Shade Pendant 137665

Component Parts

A Fixture	M Bulb (not included)
B Crossbar	N Socket (3)
C Jam Nut	O 1/4-20 Nut (3)
D Threaded Nipple	P Spider
E Ground Screw	Q Bottom Diffuser
F Canopy Ring	R Lower Assembly
G Canopy	S Threaded Nipple
H Swivel	T Cap
I 3" Fixture Pipe (1)	U Lock Washer
J 6" Fixture Pipe (1)	V Knurled Ball (4)
K 12" Fixture Pipe (2)	W Top Diffuser (2)
L Stem Nipple (4)	X Shade



HUBBARDTON FORGE.

MODERN AMERICAN BLACKSMITHS | FINE, HAND CRAFTED LIGHTING
CASTLETON, VERMONT USA | HUBBARDTONFORGE.COM

50432

2 OF 6

ASSEMBLY & INSTALLATION INSTRUCTIONS

A813

Brindille Drum Shade Pendant 137665

CAUTION: FAILURE TO INSTALL THIS FIXTURE PROPERLY MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH AND PROPERTY DAMAGE. We recommend installation by a licensed electrician. This product must be installed in accordance with applicable installation code(s), by a person familiar with the construction and operation of the product and the hazards involved.*

Caution: Do not exceed maximum wattage noted on fixture. Use only recommended bulbs with fixture.

Please Note: After installation extra hardware and accessories are possible due to our kits are used on multiple products and options.

To Install Fixture (Figure 1) on following page

CAUTION: BE SURE POWER IS OFF AT THE MAIN BREAKER BOX PRIOR TO INSTALLATION.

1. Carefully unpack fixture (A) from the carton.
2. Thread jam nut (C) and crossbar (B) onto threaded nipple (D) with ground screw (E) facing towards swivel (H); leave both parts loose.
3. Using two machine screws (not provided), temporarily fasten crossbar (B) to the electric box.

NOTE: A NEW ELECTRIC BOX COMES WITH SCREWS. WHEN REPLACING A FIXTURE, RETAIN THE EXISTING SCREWS FOR USE WITH THE NEW FIXTURE.

4. Adjust the length of threaded nipple (D) in crossbar (B) so that canopy ring (F) will hold canopy (G) against the ceiling with no threads showing for best appearance. When the correct adjustment is established, tighten jam nut (C) against crossbar (B) to secure the adjustment.
5. Remove crossbar (B) from the electrical box and proceed with the assembly instructions.
6. Locate fixture pipes (I, J, K), fixture (A), stem nipples (L). Stem nipples (L) can be found in the kit bag.
7. Provided are multiple fixture pipes in three different lengths. Choose the combination that will achieve the overall height desired. Refer to the table below to determine the pipes required to reach the desired overall height. Once you have determined the components necessary, feed the wires that exit fixture (A) through the individual components and thread pipes and nipples together. Wires will slip easier through loose components than through pipes and nipples that are pre-assembled. Once wires are run, apply thread locking compound to all the connection points and assemble the pipes and nipples.

		Overall Height of Fixture															
		21.4	24.4	27.4	30.4	33.4	36.4	39.4	42.4	45.4	48.4	51.4	54.4	57.4	60.4	63.4	66.4
# of Pipes Required	3" Pipe (I)		1		1		1		1		1		1		1		1
	6" Pipe (J)			1	1			1	1			1	1			1	1
	12" Pipe (K)					1	1	1	1	2	2	2	2	3	3	3	3

NOTE: APPLICATION OF THE THREAD LOCKING COMPOUND IS NECESSARY TO PREVENT THE PIPE FROM LOOSENING DURING REGULAR MAINTENANCE AND CLEANING OF THE FIXTURE. BE CERTAIN TO APPLY THE COMPOUND.

8. Carefully slide canopy ring (F) and canopy (G) over wires and fixture pipes (I, J, K) until they rest on fixture (A).
9. Slip wires from the fixture (A) through assembled swivel (H) and threaded nipple (D).
10. Refer to instructions on next page to continue installation.



HUBBARDTON FORGE.

MODERN AMERICAN BLACKSMITHS | FINE, HAND CRAFTED LIGHTING
CASTLETON, VERMONT USA | HUBBARDTONFORGE.COM

50432

3 OF 6

ASSEMBLY & INSTALLATION INSTRUCTIONS

A813

Brindille Drum Shade Pendant 137665


11. Using two machine screws (not provided), fasten crossbar (B) to the electric box.
12. Using suitable wire connectors (not provided) connect fixture wires to supply (white/ribbed to white and black/smooth to black). Attach a pigtail lead to crossbar ground screw (E). Hold canopy (G) close, connect all ground wires (bare copper or green to bare copper or green).

CAUTION: MAKE SURE WIRE CONNECTORS ARE TWISTED ON SECURELY, AND NO BARE WIRE IS EXPOSED.

13. Slide canopy (G) against ceiling, and secure with canopy ring (F).

CAUTION: BE SURE NO WIRES ARE PINCHED BETWEEN CANOPY (H) AND THE CEILING.

14. Refer to instructions on next page to install bottom diffuser & lower assembly.

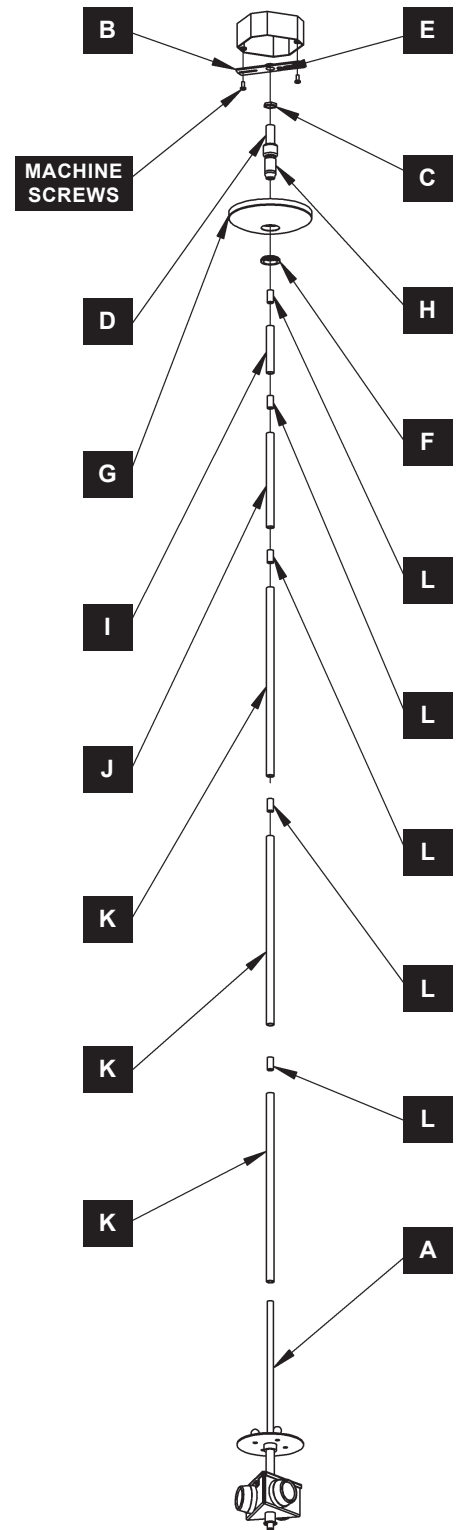

(Figure 1)



HUBBARDTON FORGE.

MODERN AMERICAN BLACKSMITHS | FINE, HAND CRAFTED LIGHTING
CASTLETON, VERMONT USA | HUBBARDTONFORGE.COM

50432

4 OF 6

To Install Bottom Diffuser & Lower Assembly (Figure 2, 3 & 4)


1. Tilt and lift shade(X) up over socket (N) and large washer.

Note: It may be helpful to secure shade to Fixture (A) to simplify the next assembly steps.


2. Remove 1/4-20 nuts (O) and spider (P) from the lower assembly (R) and set aside.
3. Align holes in diffuser (Q) with the three studs on the lower assembly (R). Lower diffuser until it sits on the washer of the lower assembly (R) (Figure 5).
4. Replace Spider (P) and 1/4-20 nuts (O) and tighten.
5. Remove cap (T) and lock washer (U) from threaded nipple (S) and set aside.
6. Feed lock washer (U) over threaded nipple (S) followed by lower assembly (R) (Figure 6).
7. While holding lower assembly (R) over the threaded nipple (S), twist cap (T) onto the nipple and tighten.

Note: Cap (T) must be snug against lower assembly (R) to prevent lower assembly from tipping.


8. Refer to instructions on next page to install shade & top diffuser.

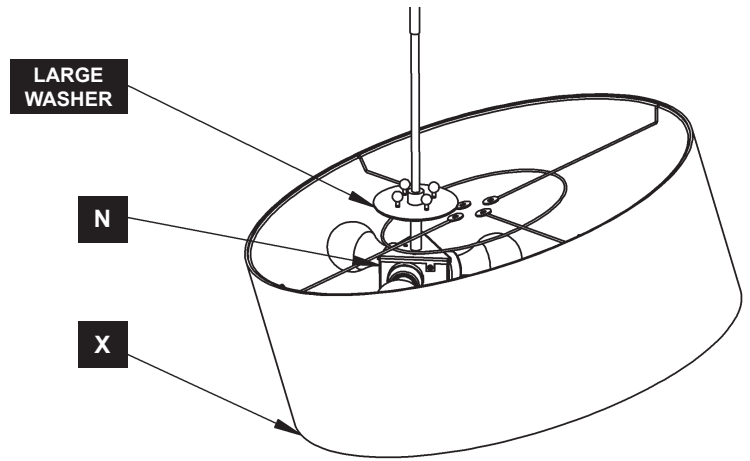

(Figure 2)

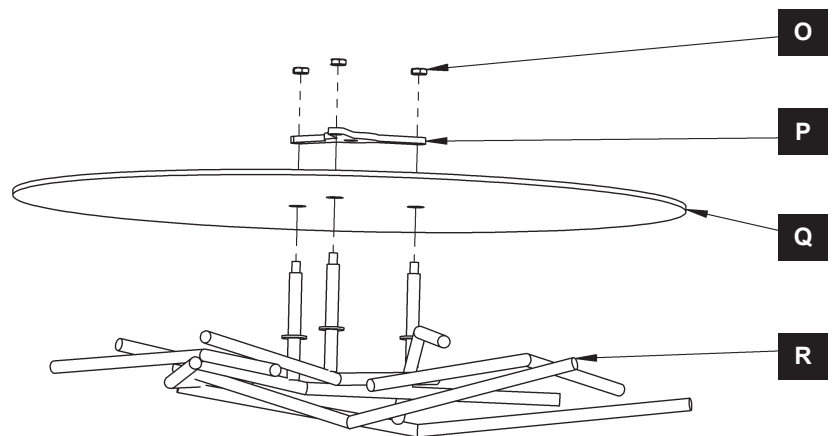

(Figure 3)

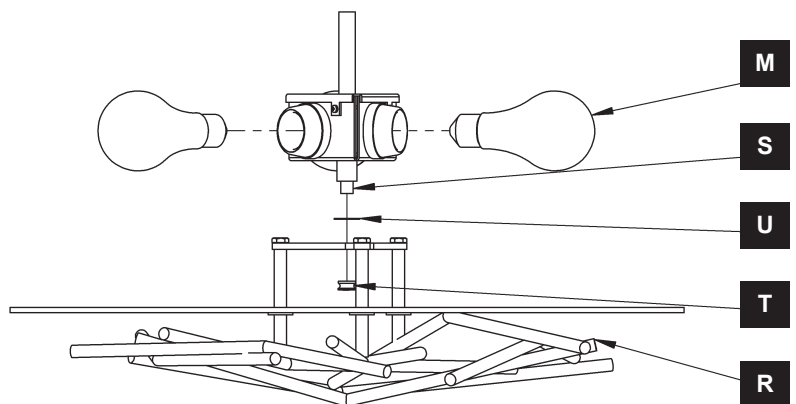

(Figure 4)


ASSEMBLY & INSTALLATION INSTRUCTIONS

A813

Brindille Drum Shade Pendant 137665

To Install Shade & Top Diffuser (Figure 5)

1. Lower shade (X) so the four washers slide down over the threaded studs.
2. Place diffusers (W) on top of shade and also aligning threaded studs (V) with holes in the glass.
3. Using the four knurled balls (V), tighten the diffuser until it is snug.
4. 5. Restore electricity at the main breaker.

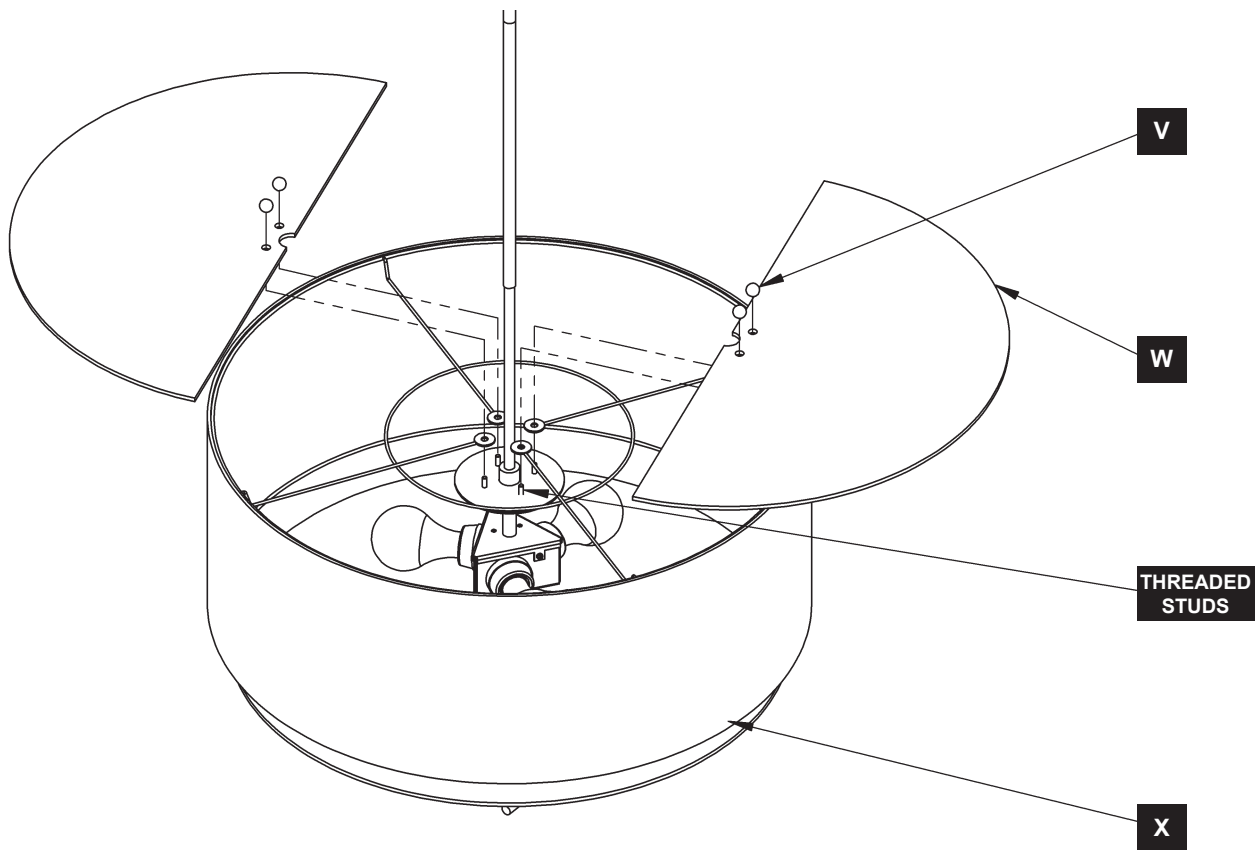

(Figure 5)

If you need further assistance, or find that you are missing any parts, please contact the dealer from which you purchased this product. We hope you enjoy your fixture!

** Hubbardton Forge will not be liable for injury or damage caused by improper installation, lamping or use of this fixture.*