


ASSEMBLY & INSTALLATION INSTRUCTIONS

A936

Planar LED Pendant with Accent 139721

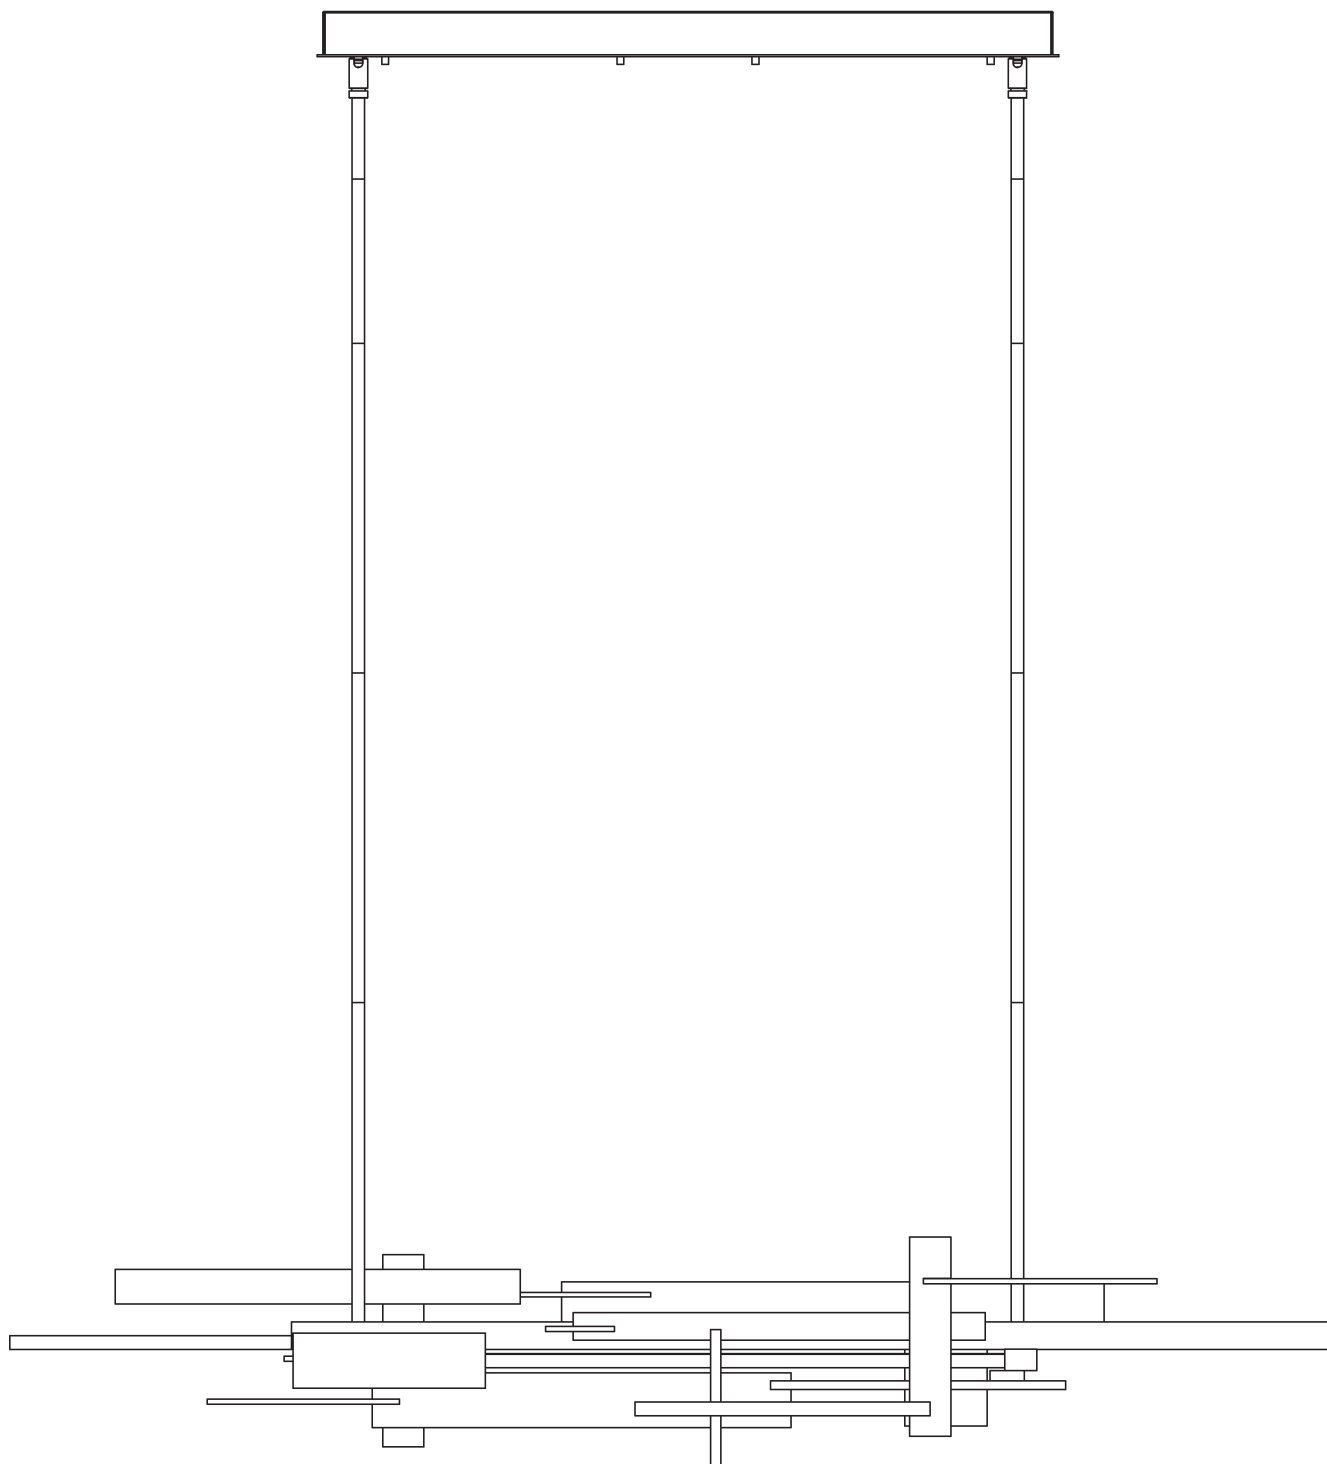

HUBBARDTON FORGE.

MODERN AMERICAN BLACKSMITHS | FINE, HAND CRAFTED LIGHTING
CASTLETON, VERMONT USA | HUBBARDTONFORGE.COM

52590

1 OF 6

Component Parts

- A Fixture**
- B Canopy**
- C #10 Screws (8)**
- D Anchors (8)**
- E Canopy Plate**
- F Swivel (2)**
- G Stud (4)**
- H 3" Fixture Pipe (2)**
- I 6" Fixture Pipe (2)**
- J 12" Fixture Pipe (6)**
- K Stem Nipples (10)**
- L Safety Cable(2)**
- M Nut (2)**
- N Washer (2)**
- O Barrel Knobs (4)**
- P Driver**
- Q Accent Assembly**
- R Nylon Tipped Set Screw (2)**
- S Fixture Coupling (2)**



ASSEMBLY & INSTALLATION INSTRUCTIONS

A936

Planar LED Pendant with Accent 139721

CAUTION: FAILURE TO INSTALL THIS FIXTURE PROPERLY MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH AND PROPERTY DAMAGE. We recommend installation by a licensed electrician. This product must be installed in accordance with applicable installation code(s), by a person familiar with the construction and operation of the product and the hazards involved.*

Caution: Do not exceed maximum wattage noted on fixture. Use only recommended bulbs with fixture.

Please Note: After installation extra hardware and accessories are possible due to our kits are used on multiple products and options.

To Install Canopy (Figure 1) on following page

CAUTION: BE SURE POWER IS OFF AT THE MAIN BREAKER BOX PRIOR TO INSTALLATION.

1. Carefully unpack canopy from the carton.
2. The canopy will need to be secured to a structural member in the ceiling. For additional holes needing anchors, place canopy (B) over the electrical box. Line up holes in canopy with holes in electrical box. With a pencil, mark the location of mounting holes needing anchors in canopy on ceiling. Set canopy (B) aside.
3. For additional holes needing anchors, place canopy (B) over the electrical box. Line up holes in canopy with holes in electrical box. With a pencil, mark the location of mounting holes needing anchors in canopy on ceiling. Set canopy (B) aside.
4. Drill 1/4" holes in the locations marked on the ceiling. Place the tapered end of the anchors (D) into the holes and gently tap them flush to the ceiling using a light weight hammer.
5. Thread the wires in the electrical box through the hole in the canopy (B) while moving the canopy into position. Using two machine screws (not provided) fasten canopy (B) to the electric box.

Note: A new electric box comes with screws. When replacing a fixture, retain the existing screws for use with the new fixture.

6. Using wood screws (C) attach canopy (B) to a structural member in the ceiling.

Note: Wood screws are supplied with your fixture; however, different materials and/or construction methods may require different fasteners. If in doubt, contact a qualified electrician.

Caution: Do not rely on anchors alone to suspend fixture. Fixture must be attached to a structural member in the ceiling.

7. Install screws (C) into remaining holes with anchors (D). Be sure not to overtighten and strip the anchor (D).
8. Using suitable wire connectors (not provided) connect transformer wires to supply wires (white to white and black to black). Connect all ground wires (bare copper or green to bare copper or green) together.


CAUTION: MAKE SURE WIRE CONNECTORS ARE TWISTED ON SECURELY, AND NO BARE WIRE IS EXPOSED.

9. Follow instructions on following page to install accent (Q).

ASSEMBLY & INSTALLATION INSTRUCTIONS

A936

Planar LED Pendant with Accent 139721

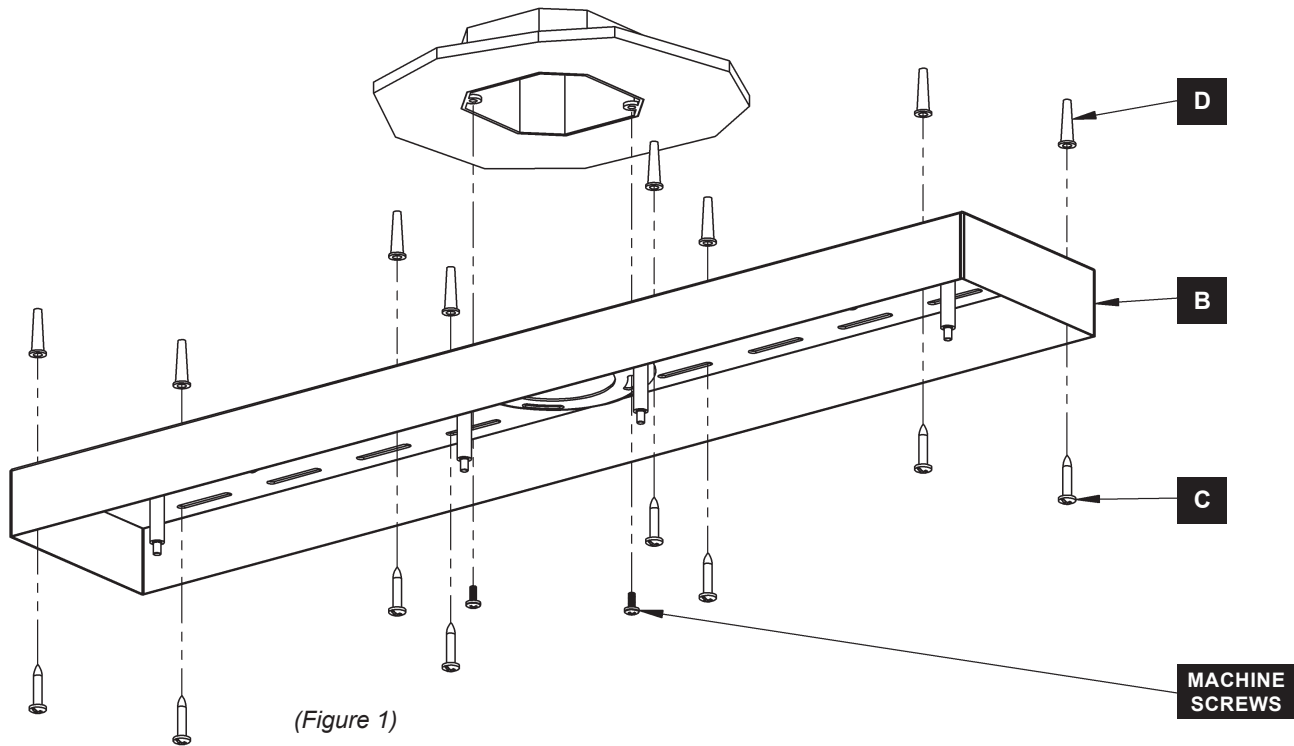

To Install Accent (Figure 2) on following page

1. Locate accent assembly (Q).
2. Nylon tip set screws (R) are shipped installed in braces on accent assembly (Q). It may be necessary to loosen these to aid future installation steps.
3. Slide accent (Q) between fixture coupling (S) until it rests on top of fixture (A).
4. Center braces on accent assembly (Q) between fixture couplings (S).
5. Tighten both nylon tip set screws (R) evenly against fixture couplings (S) with provided hex wrench to secure accent assembly (Q).
6. Follow instructions on following page to install fixture.




HUBBARDTON FORGE.

MODERN AMERICAN BLACKSMITHS | FINE, HAND CRAFTED LIGHTING
CASTLETON, VERMONT USA | HUBBARDTONFORGE.COM

52590

4 OF 6

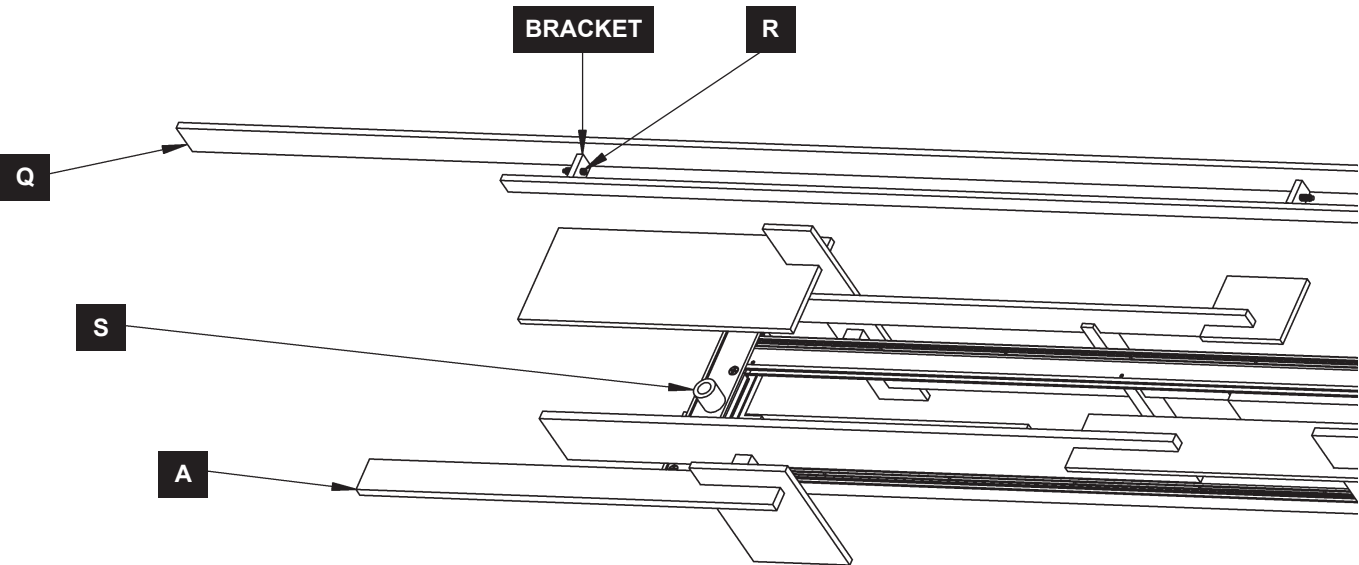

(Figure 2)

To Install Fixture (Figure 3) on following page

- 1. Carefully unpack fixture from the carton.
- 2. Locate fixture pipes (H,I,J), fixture (A), stem coupling (K). Stem couplings (K) can be found in the kit bag.
- 3. Provided are multiple fixture pipes in three different lengths. Choose the combination that will achieve the overall height desired. Refer to the table below to determine the pipes required to reach the desired overall height. Once you have determined the components necessary, feed the wires that exit fixture (A) through the individual components. Wires will slip easier through loose components than through pipes and couplings that are pre-assembled. Once wires are run, apply thread locking compound to all the connection points and assemble the pipes and nipples.

		Overall Height of Fixture														
		11.0	14.0	17.0	20.0	23.0	26.0	29.0	32.0	35.0	38.0	41.0	44.0	47.0	50.0	53.0
# of Pipes Required	3" Pipe (H)	1		1		1		1		1		1		1		1
	6" Pipe (I)		1	1			1	1			1	1			1	1
	12" Pipe (J)				1	1	1	1	2	2	2	2	3	3	3	3

NOTE: APPLICATION OF THE THREAD LOCKING COMPOUND IS NECESSARY TO PREVENT THE PIPE FROM LOOSENING DURING REGULAR MAINTENANCE AND CLEANING OF THE FIXTURE. BE CERTAIN TO APPLY THE COMPOUND.

- 4. Slip wires from the fixture (A) through assembled swivel (F) and thread swivel into fixture pipe.
- 5. Repeat repeat steps 3 & 4 for second set of pipes.
- 6. Ensure that slots on swivels (F) are aligned as shown in figure 2.
- 7. Follow instructions on following page to continue install.

ASSEMBLY & INSTALLATION INSTRUCTIONS

A936

Planar LED Pendant with Accent 139721

8. Carefully place canopy plate (E) over swivels (F) and secure with washer (N), safety cable (L) and nut (M) as shown. Washer (N), safety cable (L) and nut (M) can be found in the kit bag.
9. Lift fixture assembly (A) up to canopy (B) and place safety cables (L) over loop.
10. The LED Driver (P) OUTPUT wires are red and blue (or black) and are shipped with connectors attached. Connect the red wires from the fixture to the red wires from the driver (P) using this connector. Repeat the same for the blue wires. Blue to blue or blue to black.

WARNING: DO NOT CONNECT RED AND BLUE FIXTURE WIRES TO MAINS VOLTAGE, AS THIS CAN DAMAGE LEDS AND VOID WARRANTY COVERAGE.


11. Using suitable wire connectors (not provided) connect fixture wires to supply (white/ribbed to white and black/smooth to black). Connect all ground wires (bare copper or green to bare copper or green).

CAUTION: MAKE SURE WIRE CONNECTORS ARE TWISTED ON SECURELY, AND NO BARE WIRE IS EXPOSED.

12. Align the holes in canopy plate (E) with studs (G) and secure with barrel knobs (O).

CAUTION: BE SURE NO WIRES ARE PINCHED BETWEEN CANOPY (H) AND THE CEILING.

13. Restore electricity at main breaker.

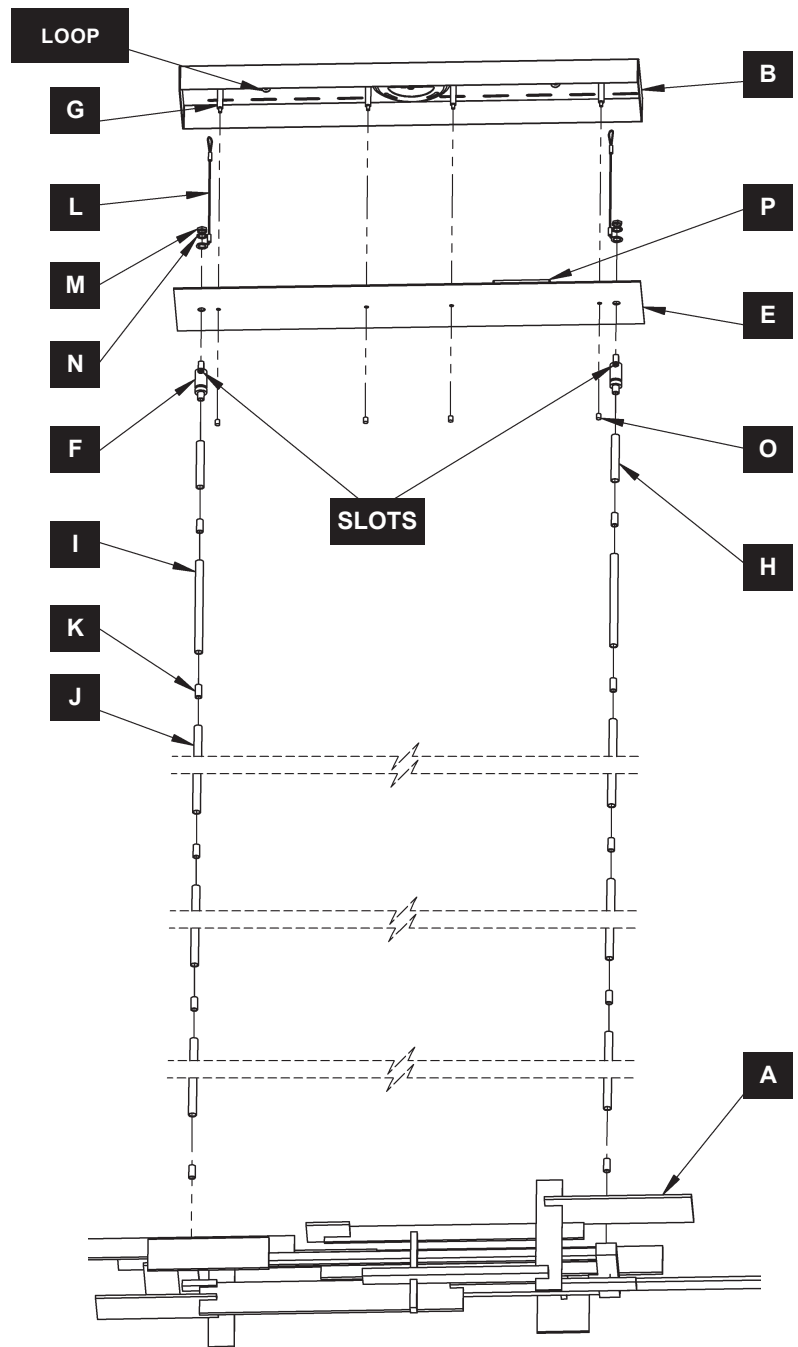

(Figure 3)

If you need further assistance, or find that you are missing any parts, please contact the dealer from which you purchased this product. We hope you enjoy your fixture!

** Hubbardton Forge will not be liable for injury or damage caused by improper installation, lamping or use of this fixture.*