


ASSEMBLY & INSTALLATION INSTRUCTIONS

A945

Erlenmeyer Pendant 137725

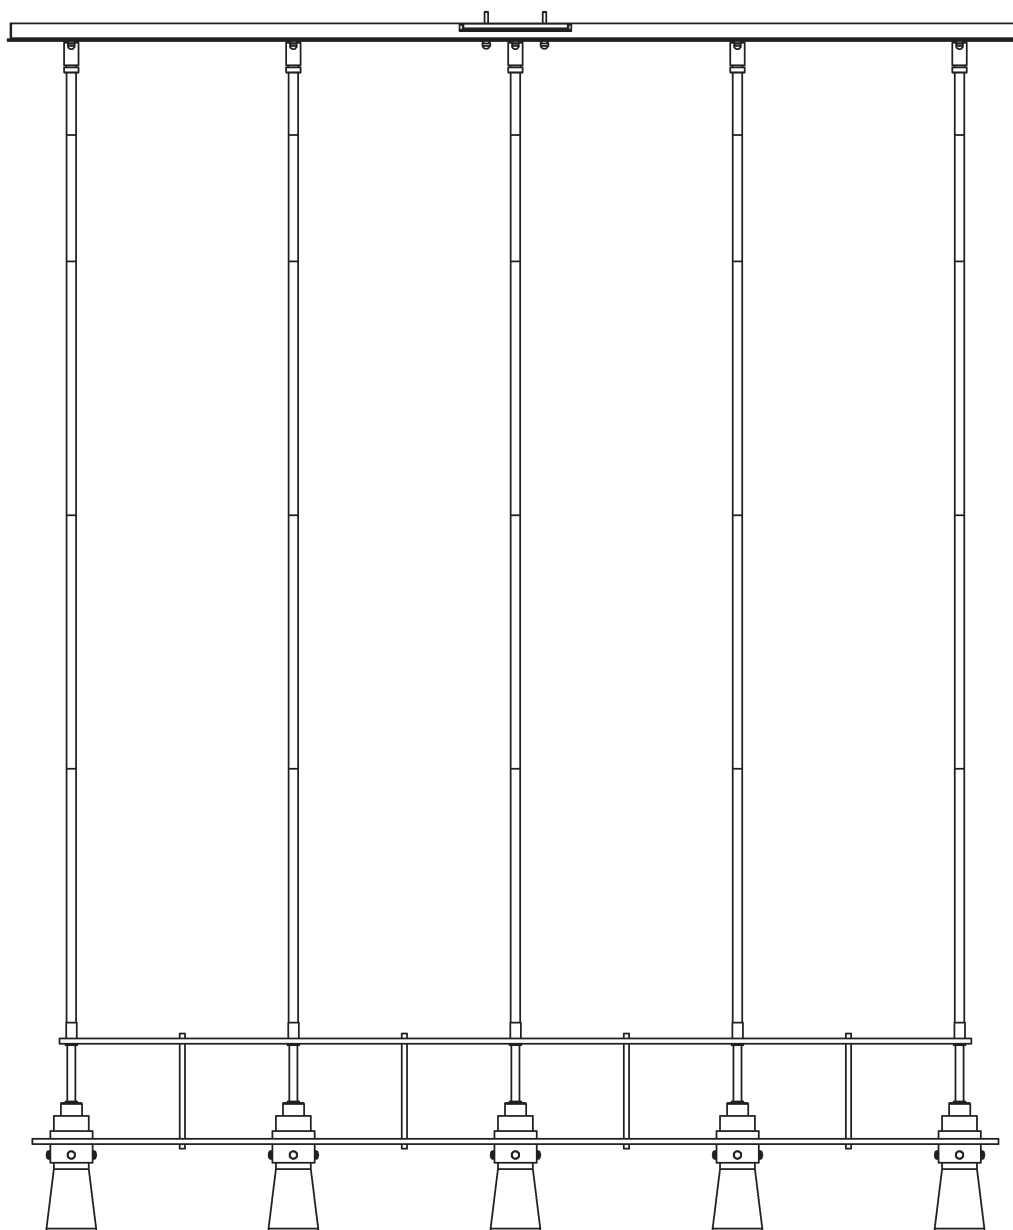

HUBBARDTON FORGE.

MODERN AMERICAN BLACKSMITHS | FINE, HAND CRAFTED LIGHTING
CASTLETON, VERMONT USA | HUBBARDTONFORGE.COM

52599

1 OF 7

Component Parts

- A Fixture**
- B Canopy**
- C #10 Screws (2)**
- D Anchors (2)**
- E Mounting Bracket**
- F Swivel (5)**
- G Stud (2)**
- H 3" Fixture Pipe (5)**
- I 6" Fixture Pipe (5)**
- J 12" Fixture Pipe (15)**
- K Stem Nipples (15)**
- L Nut (5)**
- M Washer (5)**
- N Support Cable**
- O Wire Connectors (2)**
- P Fixture Ground Wire**
- Q #8 Screws (3)**
- R Cupped Washer**
- S Ground Screw**
- T Knurled Ball (2)**
- U Socket (5)**
- V Bulb (not included)**
- W Glass (5)**
- X Thumb Screw (15)**



ASSEMBLY & INSTALLATION INSTRUCTIONS

A945

Erlenmeyer Pendant 137725

CAUTION: FAILURE TO INSTALL THIS FIXTURE PROPERLY MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH AND PROPERTY DAMAGE. We recommend installation by a licensed electrician. This product must be installed in accordance with applicable installation code(s), by a person familiar with the construction and operation of the product and the hazards involved.*

Caution: Do not exceed maximum wattage noted on fixture. Use only recommended bulbs with fixture.

Please Note: After installation extra hardware and accessories are possible due to our kits are used on multiple products and options.

To Assemble Fixture (Figure 1) on following page

CAUTION: BE SURE POWER IS OFF AT THE MAIN BREAKER BOX PRIOR TO INSTALLATION.

1. Carefully unpack fixture (A) from the carton.
2. Locate fixture pipes (H,I,J), and stem nipples (K). Stem nipples (K) can be found in the kit bag.
3. Provided are multiple fixture pipes in three different lengths. Choose the combination that will achieve the overall height desired. Refer to the table below to determine the pipes required to reach the desired overall height. Once you have determined the components necessary, feed the wires that exit fixture (A) through the individual components. Wires will slip easier through loose components than through pipes and couplings that are pre-assembled. Once wires are run, apply thread locking compound to all the connection points and assemble the pipes and nipples.

		Overall Height of Fixture															
		12.2	15.2	18.2	21.2	24.2	27.2	30.2	33.2	36.2	39.2	42.2	45.2	48.2	51.2	54.2	57.2
# of Pipes Required	3" Pipe (I)		1		1		1		1		1		1		1		1
	6" Pipe (J)			1	1			1	1			1	1			1	1
	12" Pipe (K)					1	1	1	1	2	2	2	2	3	3	3	3

NOTE: APPLICATION OF THE THREAD LOCKING COMPOUND IS NECESSARY TO PREVENT THE PIPE FROM LOOSENING DURING REGULAR MAINTENANCE AND CLEANING OF THE FIXTURE. BE CERTAIN TO APPLY THE COMPOUND.

4. Slip wires from the fixture (A) through assembled swivel (F) and thread swivel into fixture pipe.
5. Repeat repeat steps 3 & 4 for the remaining sets of pipes.
6. Ensure that slots on swivels (F) are aligned.
7. Carefully place canopy (B) over swivels (F) and secure with washer (M) and nut (L) as shown. Washers (M) and nuts (L) can be found in the kit bag.
8. Follow instructions on following page to continue install.



HUBBARDTON FORGE.

MODERN AMERICAN BLACKSMITHS | FINE, HAND CRAFTED LIGHTING
CASTLETON, VERMONT USA | HUBBARDTONFORGE.COM

52599

3 OF 7

A945

SLOTS



ASSEMBLY & INSTALLATION INSTRUCTIONS

A945

Erlenmeyer Pendant 137725

To Install Fixture (Figure 2 & 3) on following page

1. Thread studs (G) through appropriate holes in mounting bracket (E) to match holes in canopy (A).
2. Position the mounting bracket (E) over the electrical box aligning ovals in bracket with mounting holes in electrical box. Orient fixture to desired hanging position and mark the location of both anchors (D) on the ceiling. Set the mounting bracket aside.
3. Drill 1/8" holes in location marked on the ceiling. Place tapered ends of both anchors (D) into holes and gently tap flush with a hammer.
4. Place mounting bracket (E) over electrical box. Using two machine screws (not provided) fasten the mounting bracket (E) to the electric box. Thread #10 screws (C) into anchors (D) to secure mounting bracket (E) to ceiling.
5. Using the one wire connector (O), provided, connect four black fixture wires to connector (O). Wires should be stripped 3/8" maximum. In the remaining connection of the wire connector (O) run a black pig tail lead for the junction box. (Figure 3)
6. Using the remaining wire connector (O), provided, connect four white fixture wires to connector (O). In the remaining connection of the wire connector (O) run a white pig tail lead for the junction box. (Figure 3)
7. Check that fixture wires, ground wire (P), and support cable (N) are routed up through center hole in square section of canopy.
8. Raise fixture close to ceiling. Attach support cable (N) to mounting bracket using one #8 screw (Q). Temporarily suspend fixture using cable.

CAUTION: THE CABLE IS INTENDED TO TEMPORARILY SUSPEND FIXTURE WHILE WIRING CONNECTIONS ARE COMPLETED. NEVER DEPEND ON THEM TO SUPPORT FIXTURES WITH GLASS INSTALLED.

9. Using suitable wire connectors (not provided), connect fixture wires to supply (white to white and black to black). Using cupped washer (R) and green ground screw (S), found in kit bag, run pigtail from mounting bracket (E) to junction box. Connect all ground wires, including fixture ground wire (P). Push wires back into outlet box.

CAUTION: MAKE SURE WIRE CONNECTORS ARE TWISTED ON SECURELY, AND NO BARE WIRE IS EXPOSED.

10. Raise fixture (A) to ceiling over threaded studs (G) and push firmly to ceiling. Secure the canopy by attaching knurled balls (T)
11. Thread remaining #8 screws (Q) through the ends of the canopy into the threaded holes in mounting bracket (E).



CAUTION: BE SURE NO WIRES ARE PINCHED BETWEEN CANOPY (H) AND THE CEILING.

12. Follow instructions on following page to install glass.

ASSEMBLY & INSTALLATION INSTRUCTIONS

A945

Erlenmeyer Pendant 137725

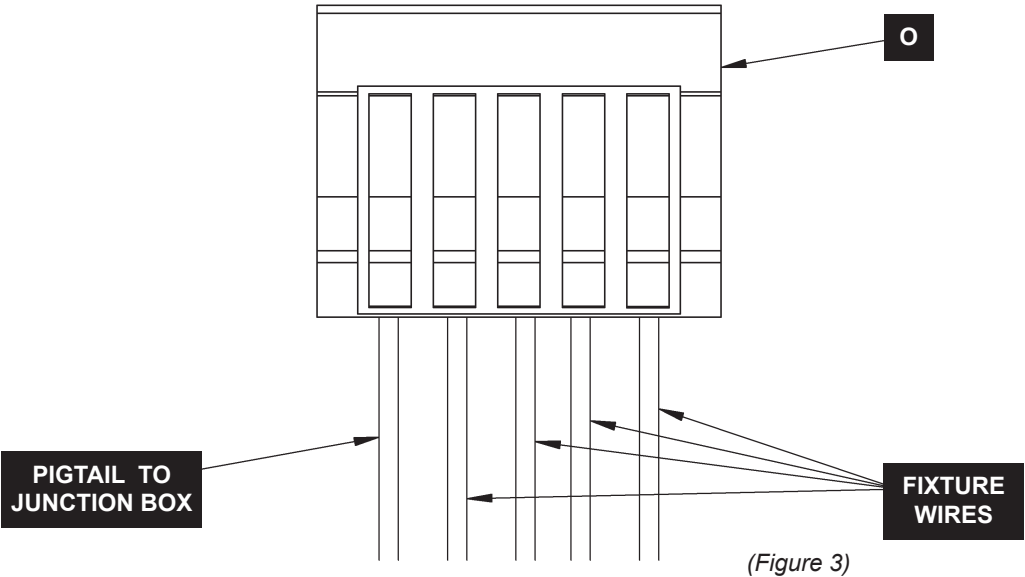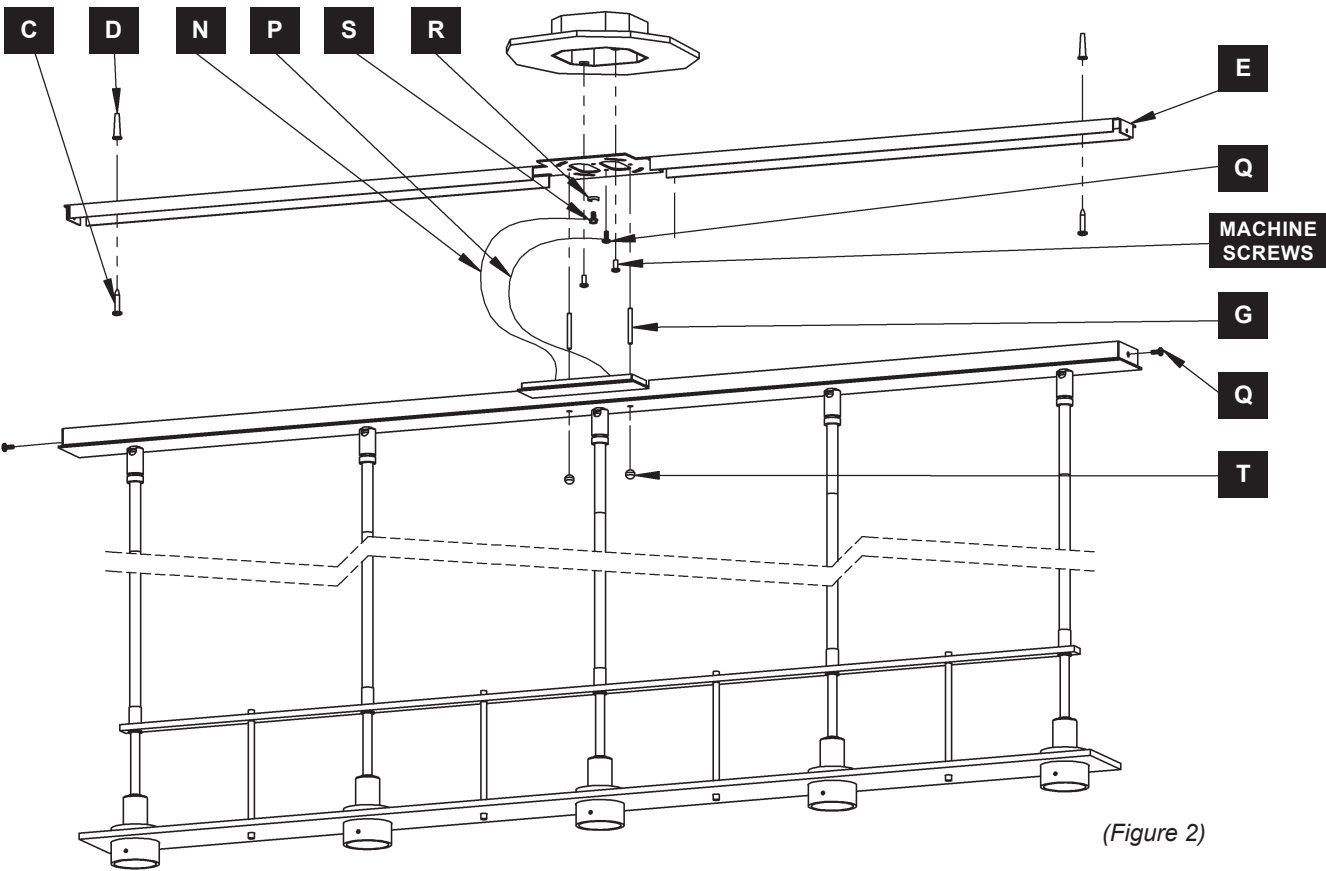


Erlenmeyer Pendant 137725

To Install Glass (Figure 4)

1. Install bulbs (V) (not included) into sockets (U).
2. Carefully locate and unpack glass (W).
3. Loosen the three thumb screws (X). It is not necessary to remove them from fixture (A).
4. Raise glass (W) until groove is aligned with thumb screws (X).
5. Tighten three thumb screws (X) equal amounts until snug with glass (W).

CAUTION: Be careful not to over tighten as this could break the glass.

6. Repeat for remaining glass (W).
7. Restore electricity at main breaker.

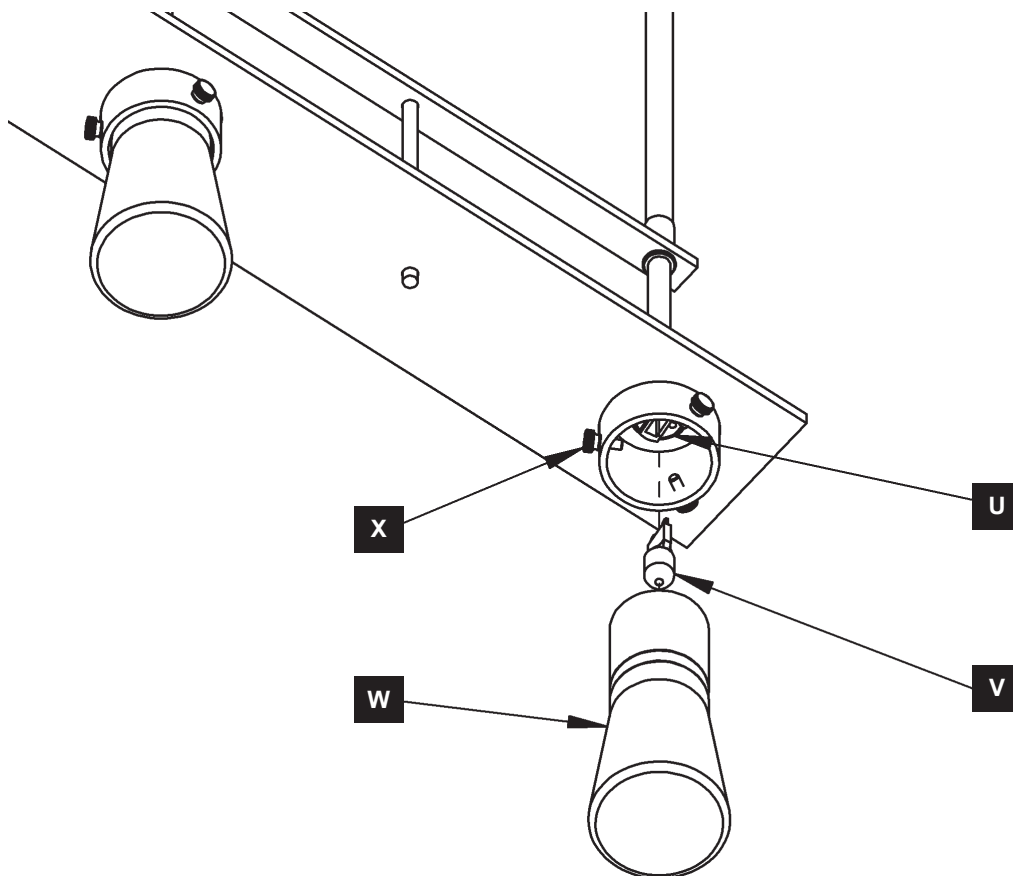

(Figure 4)

If you need further assistance, or find that you are missing any parts, please contact the dealer from which you purchased this product. We hope you enjoy your fixture!

** Hubbardton Forge will not be liable for injury or damage caused by improper installation, lamping or use of this fixture.*