


ASSEMBLY & INSTALLATION INSTRUCTIONS

Griffin Pendant 137750

A946

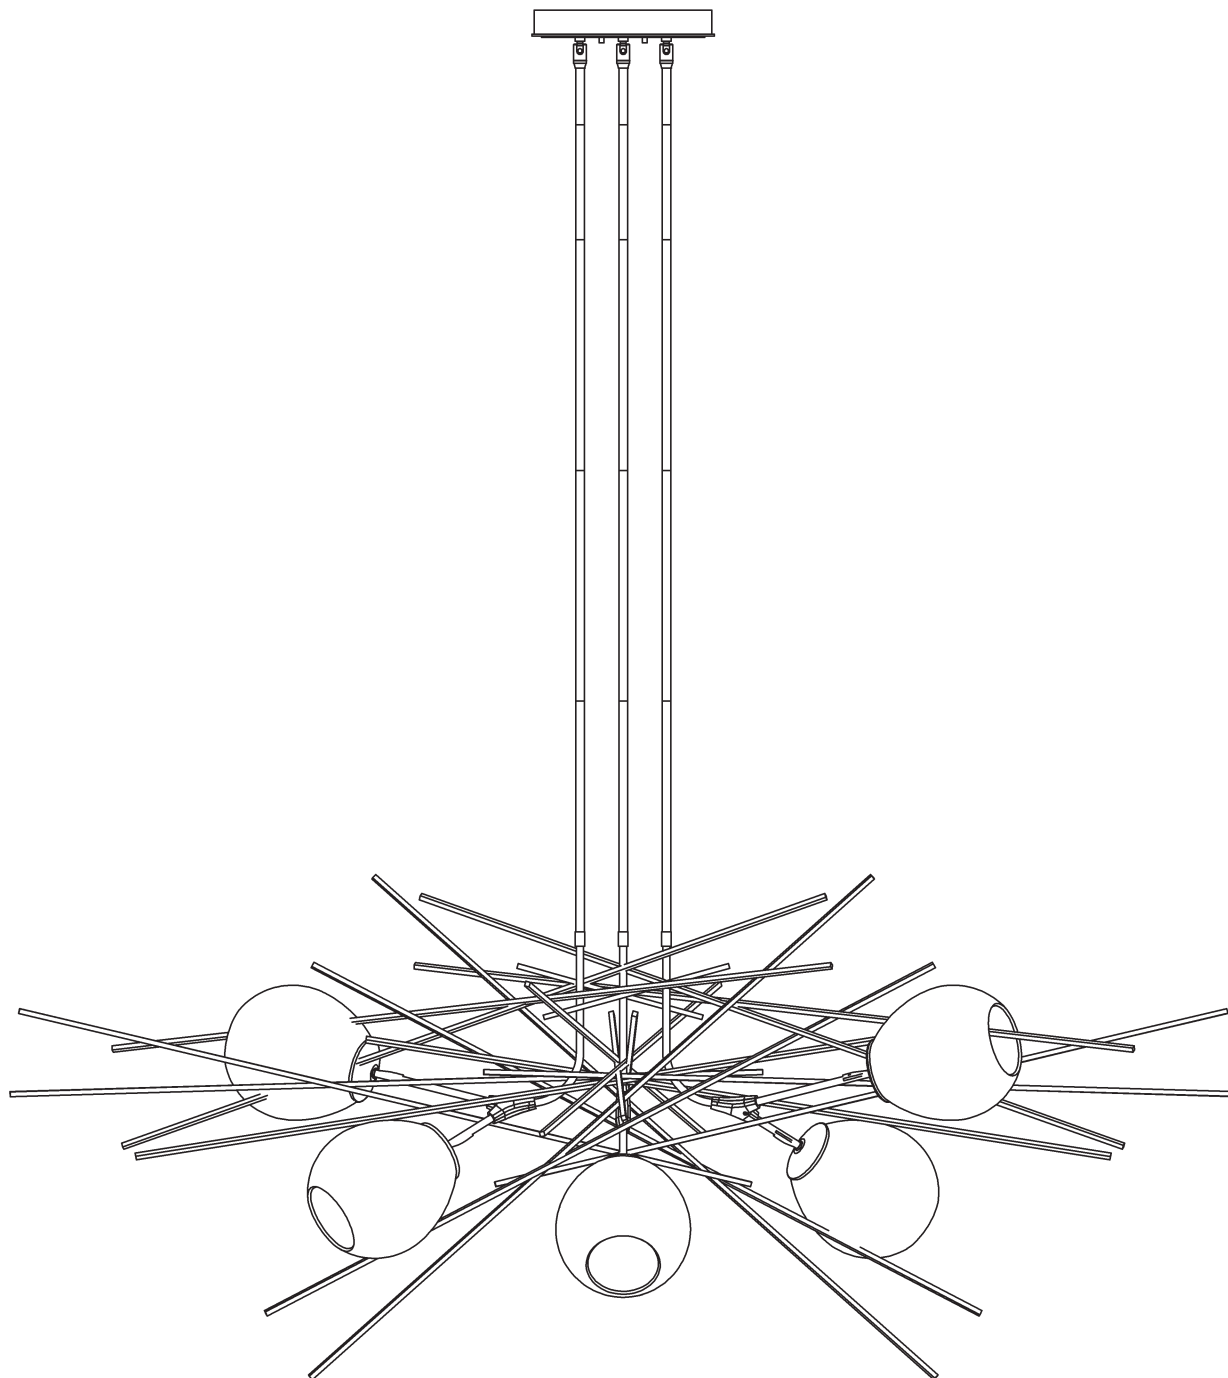

HUBBARDTON FORGE.

MODERN AMERICAN BLACKSMITHS | FINE, HAND CRAFTED LIGHTING
CASTLETON, VERMONT USA | HUBBARDTONFORGE.COM

52600

1
OF 7

Component Parts

- A Fixture**
- B Fixture Coupling (3)**
- C Mounting Bracket**
- D 3" Fixture Pipe (2)**
- E 6" Fixture Pipe (2)**
- F 12" Fixture Pipe (6)**
- G Stem Nipples (10)**
- H Hex Nipple (3)**
- I Lock Washer (3)**
- J Swivel (3)**
- K Canopy Plate**
- L Studs (2)**
- M Canopy**
- N Barrel Nuts (2)**
- O Nuts (4)**
- P Retaining ring & cover (6)**
- Q Cupped Washer**
- R Ground Screw**
- S Wire Connector (3)**
- T Glass (6)**
- U White Washer (6)**



ASSEMBLY & INSTALLATION INSTRUCTIONS

Griffin Pendant 137750

A946

CAUTION: FAILURE TO INSTALL THIS FIXTURE PROPERLY MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH AND PROPERTY DAMAGE. We recommend installation by a licensed electrician. This product must be installed in accordance with applicable installation code(s), by a person familiar with the construction and operation of the product and the hazards involved.*

Caution: Do not exceed maximum wattage noted on fixture. Use only recommended bulbs with fixture.

Please Note: After installation extra hardware and accessories are possible; our kits are used on multiple products.

To Unbox Fixture *(Figure 1, following page)*

CAUTION: THE INSTALLATION OF THIS FIXTURE REQUIRES TWO PEOPLE

1. The fixture (A) will be shipped in a crate.
2. Remove cardboard from the outside of the crate.
3. The fixture is shipped with two shipping hangers installed in it. The shipping hangers are sandwiched between two wood boards.
4. While supporting fixture carefully remove the four screws that are holding the board. Remove the board.

CAUTION: REMOVING THE SCREWS AND BOARD WILL ALLOW THE FIXTURE TO DROP, BE SURE TO SECURE FIXTURE WHILE REMOVING THE SCREWS AND BOARD.

5. Carefully lower the fixture until it is supported by the zip-tie.
6. Unscrew shipping hangers from the fixture.
7. Assembly of the fixture will take place while it is suspended inside the crate by zip-tie.



HUBBARDTON FORGE.

MODERN AMERICAN BLACKSMITHS | FINE, HAND CRAFTED LIGHTING
CASTLETON, VERMONT USA | HUBBARDTONFORGE.COM


52600

3
OF 7

ASSEMBLY & INSTALLATION INSTRUCTIONS

Griffin Pendant 137750

A946

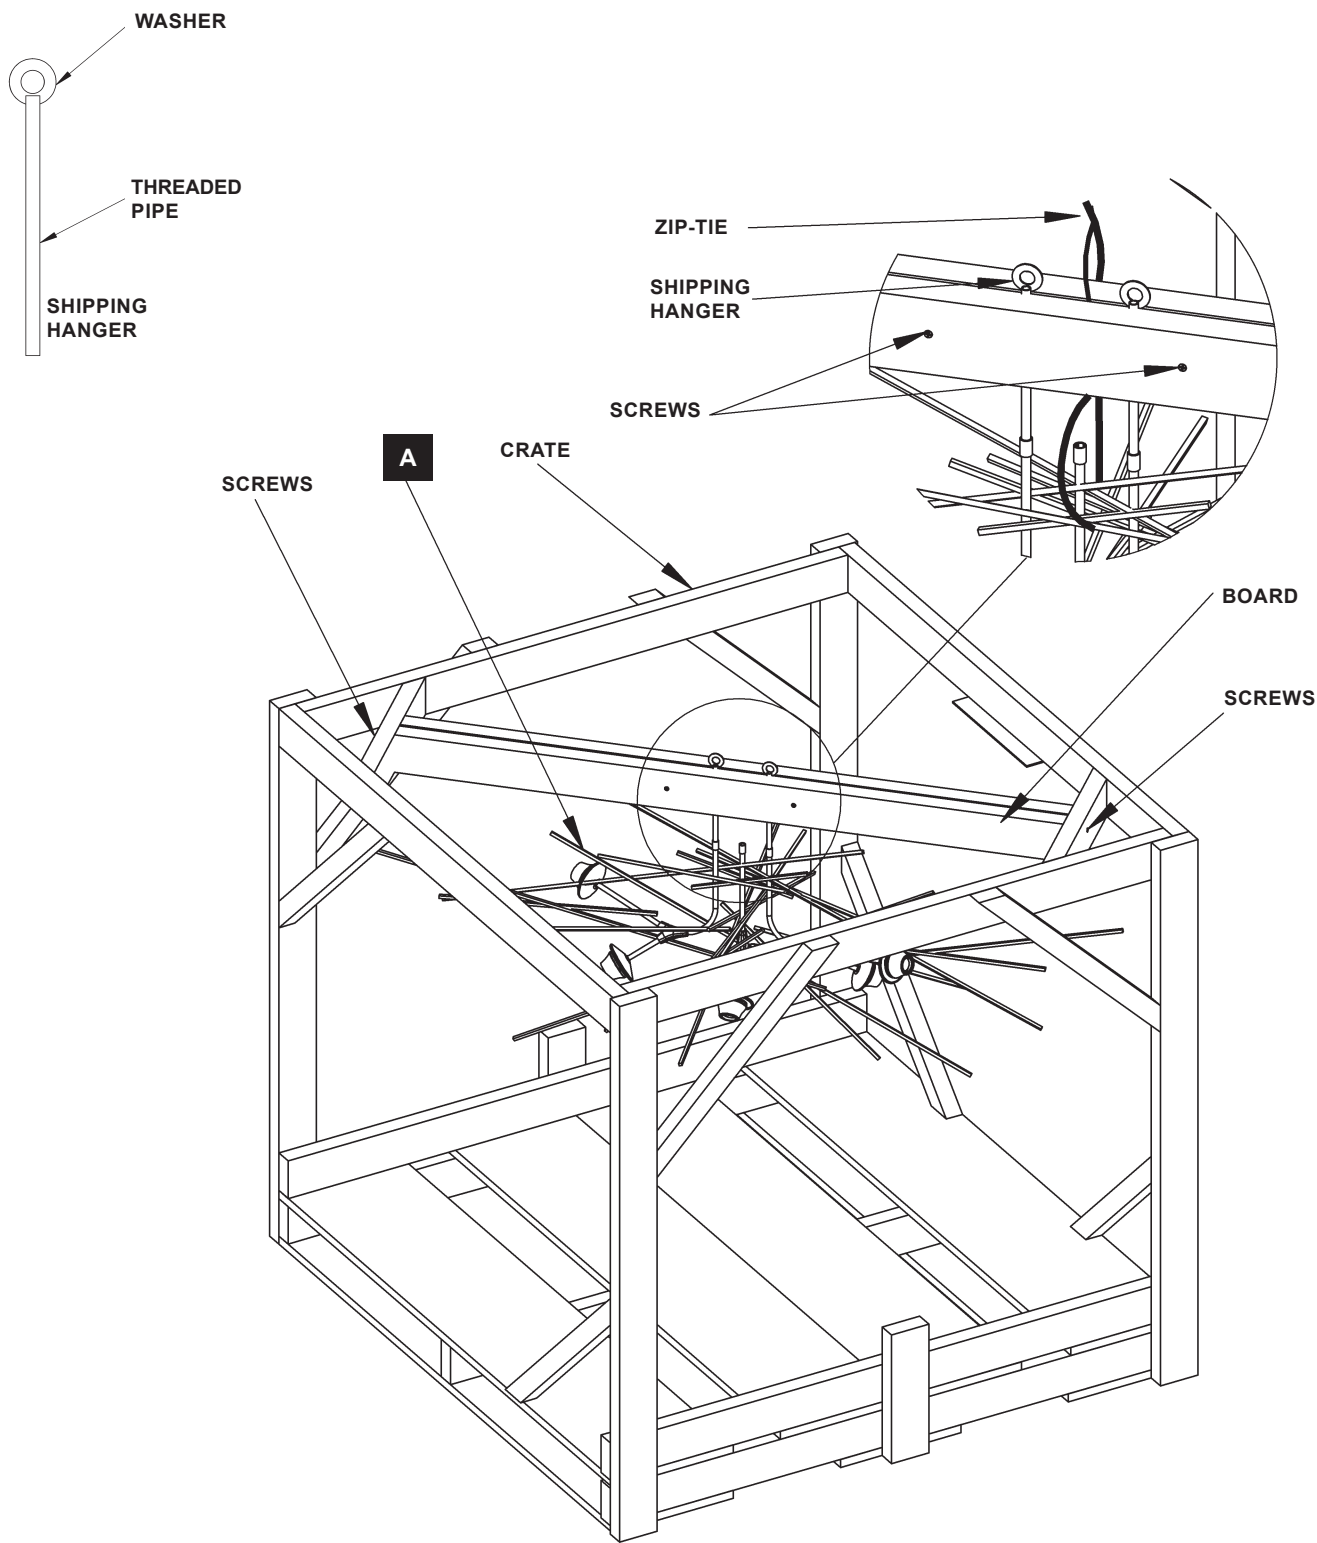

(Figure 1)

ASSEMBLY & INSTALLATION INSTRUCTIONS

Griffin Pendant 137750

A946

To Assemble and install Fixture (Figures 2, 3 & 4 following page)

CAUTION: BE SURE POWER IS OFF AT THE MAIN BREAKER BOX PRIOR TO INSTALLATION.

1. Locate fixture pipes (D,E,F), fixture (A), stem nipples (G). Stem nipples (G) can be found in the kit bag.
2. Provided are multiple fixture pipes in three different lengths. Choose the combination that will achieve the overall height desired. Refer to the table below to determine the pipes required to reach the desired overall height. Once you have determined the components necessary, feed the wires that exit fixture coupling (B) through the individual components. Wires will slip easier through loose components than through pipes and couplings that are pre-assembled. Once wires are run, apply thread locking compound to all the connection points and assemble the pipes and nipples.

		Overall Height of Fixture													
		32.3	35.3	38.3	41.3	44.3	47.3	50.3	53.3	56.3	59.3	62.3	65.3	68.3	71.3
# of Pipes Required	3" Pipe (D)		1		1		1		1		1		1		1
	6" Pipe (E)	1	1			1	1			1	1			1	1
	12" Pipe (F)			1	1	1	1	2	2	2	2	3	3	3	3

NOTE: APPLICATION OF THE THREAD LOCKING COMPOUND IS NECESSARY TO PREVENT THE PIPE FROM LOOSENING DURING REGULAR MAINTENANCE AND CLEANING OF THE FIXTURE. BE CERTAIN TO APPLY THE COMPOUND.

3. Slip wires from the fixture coupling (B) through assembled swivel (J) and thread swivel into fixture pipe.
4. Repeat repeat steps 2 & 3 for remaining fixture couplings (B).
5. Ensure that slots on swivels (J) are aligned as shown in figure 3.
6. Slide wires through holes in canopy plate (K) and lower the canopy plate so that it rests on the fixture (A).
7. Slide the wires from the swivel (J) through mounting bracket (C), lock washer (I) and hex nipple (H).
8. Secure mounting bracket (C) to swivels (J) using lock washer (I) and hex nipple(H)
9. Locate the canopy (M). Attach canopy to mounting bracket (D) using 4 nuts (N). Nuts (N) are shipped attached to canopy (L).
10. Thread the two studs (L) into the mounting bracket (C).
11. While supporting the fixture (A) carefully cut the zip-tie.
12. Raise fixture (A) and canopy (M) assembly up to the ceiling.
13. Using two machine screws (not provided), fasten the canopy (M) to the electric box.

Note: A new electric box comes with screws. When replacing a fixture, retain the existing screws for use with the new fixture.

14. Follow instructions on following page to continue install.



HUBBARDTON FORGE.

MODERN AMERICAN BLACKSMITHS | FINE, HAND CRAFTED LIGHTING
CASTLETON, VERMONT USA | HUBBARDTONFORGE.COM

52600

5 OF 7

ASSEMBLY & INSTALLATION INSTRUCTIONS

Griffin Pendant 137750

A946


15. Using the three wire connectors (S) provided, connect four black fixture wires to one connector, four white fixture wires to one connector and four ground wires to the last connector. Black and white wires should be stripped 3/8" maximum. In the remaining connection of the wire connectors (S) run a black pig tail lead, white pig tail lead and ground pig tail lead to the junction box (Figure 4).

16. Using suitable wire connectors (not provided) connect fixture wires to the supply wire (white to white and black to black). Attach a pigtail lead to the canopy (M) using the cupped washer (Q) and ground screw (R) found in kit bag. Connect all ground wires together.


CAUTION: MAKE SURE WIRE CONNECTORS ARE TWISTED ON SECURELY, AND NO BARE WIRE IS EXPOSED.

17. Raise the canopy plate (K) up to the canopy (M) and secure with barrel nuts (N). Be sure threaded studs (L) are fully seated in barrel nuts.


18. Refer to instructions on next page to Install Glass.

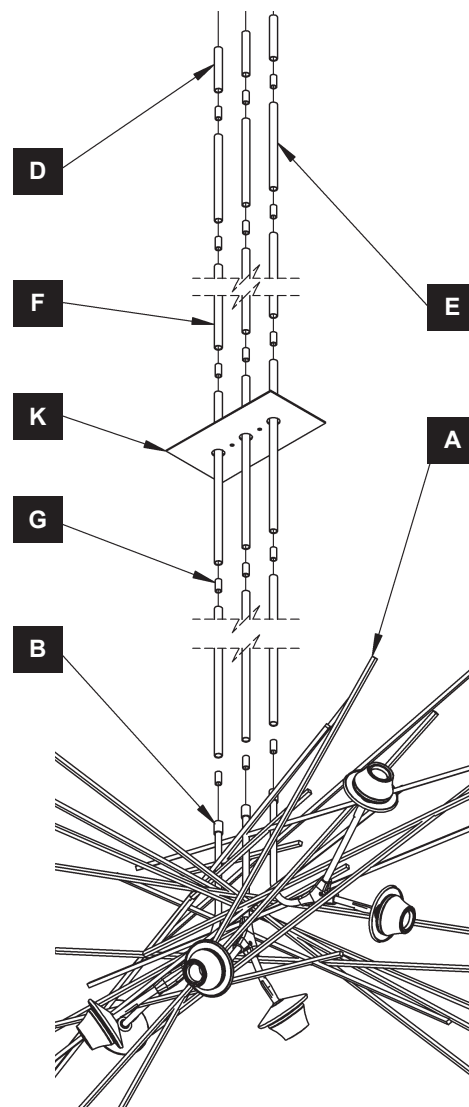

(Figure 2)

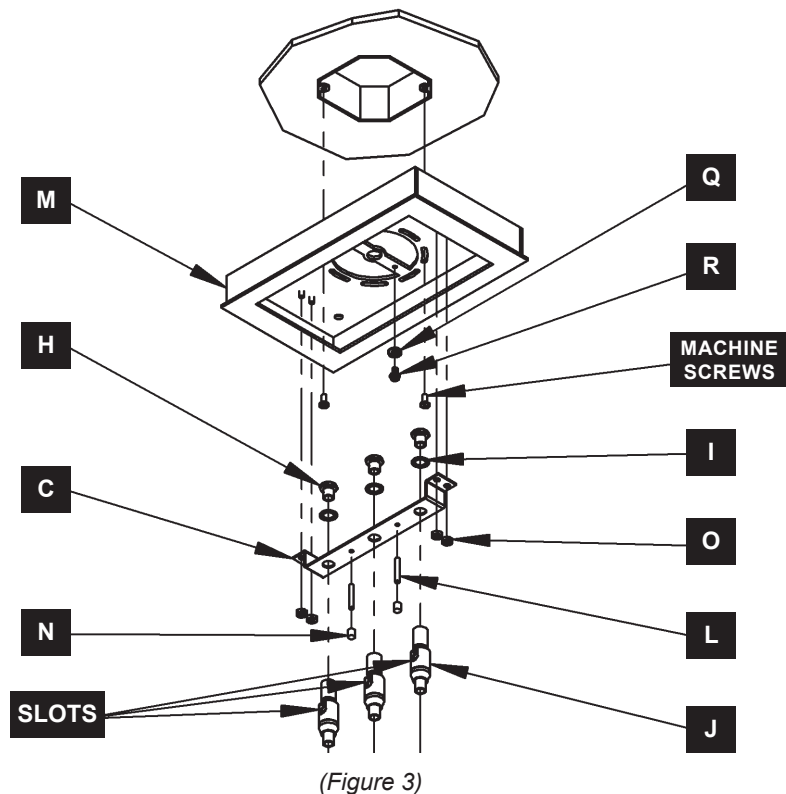

(Figure 3)

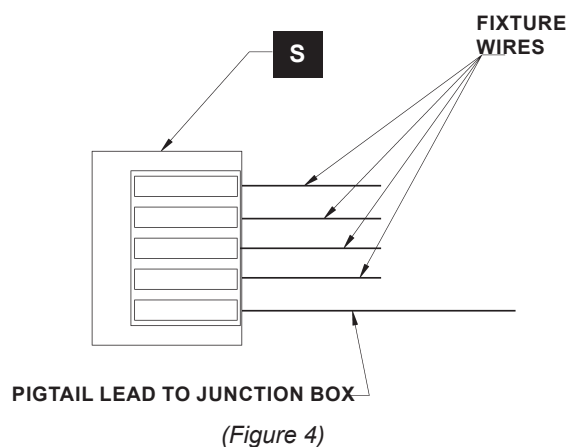

(Figure 4)



HUBBARDTON FORGE.

MODERN AMERICAN BLACKSMITHS | FINE, HAND CRAFTED LIGHTING
CASTLETON, VERMONT USA | HUBBARDTONFORGE.COM

52600

6 OF 7


ASSEMBLY & INSTALLATION INSTRUCTIONS

Griffin Pendant 137750

A946

To Install Glass (Figure 5)

1. Locate Retaining rings and covers (P). Retaining rings and covers (P) are shipped in the kit bag.
2. Slide glass (T) over socket. Slip white washer (U) over socket and thread on retaining ring and cover (P).
3. Install bulb (not provided) into socket. Repeat for remaining sockets and glass.
4. Restore electricity at main breaker.

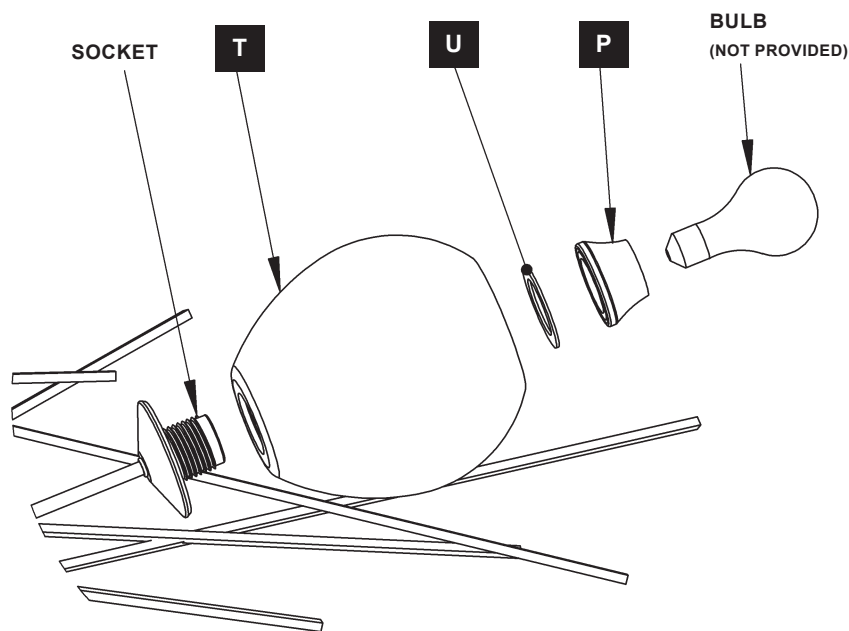

(Figure 5)

If you need further assistance, or find that you are missing any parts, please contact the dealer from which you purchased this product. We hope you enjoy your fixture!

*** Hubbardton Forge will not be liable for injury or damage caused by improper installation, lamping or use of this fixture.**



HUBBARDTON FORGE.

MODERN AMERICAN BLACKSMITHS | FINE, HAND CRAFTED LIGHTING
CASTLETON, VERMONT USA | HUBBARDTONFORGE.COM

52600

7
OF 7