


ASSEMBLY & INSTALLATION INSTRUCTIONS

A949

Exos Double Shade Pendant 194642



HUBBARDTON FORGE.

MODERN AMERICAN BLACKSMITHS | FINE, HAND CRAFTED LIGHTING
CASTLETON, VERMONT USA | HUBBARDTONFORGE.COM

52603

1 OF 8

Component Parts

- | | | | |
|----------|-----------------------------|----------|------------------------------|
| A | Fixture | N | Support Arms (3) |
| B | Crossbar | O | Inner Spider Assembly |
| C | Jam Nut | P | Inner Shade |
| D | Threaded Nipple | Q | Studs (2) |
| E | Ground Screw | R | Hex Nuts (2) |
| F | Canopy Ring | S | Outer Shade |
| G | Canopy | T | Support Arms (3) |
| H | Swivel | U | Outer Spider Assembly |
| I | 3" Fixture Pipe (1) | V | Fixture |
| J | 6" Fixture Pipe (1) | W | Diffuser |
| K | 12" Fixture Pipe (3) | X | Diffuser Support |
| L | Stem Nipple (4) | | |
| M | Spacer | | |

ASSEMBLY & INSTALLATION INSTRUCTIONS

A949

Exos Double Shade Pendant 194642

CAUTION: FAILURE TO INSTALL THIS FIXTURE PROPERLY MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH AND PROPERTY DAMAGE. We recommend installation by a licensed electrician. This product must be installed in accordance with applicable installation code(s), by a person familiar with the construction and operation of the product and the hazards involved.*

Caution: Do not exceed maximum wattage noted on fixture. Use only recommended bulbs with fixture.

Please Note: After installation extra hardware and accessories are possible due to our kits are used on multiple products and options.

To Install Fixture (Figure 1) on following page

CAUTION: BE SURE POWER IS OFF AT THE MAIN BREAKER BOX PRIOR TO INSTALLATION.

1. Carefully unpack fixture (A) from the carton.
2. Thread jam nut (C) and crossbar (B) onto threaded nipple (D) with ground screw (E) facing towards swivel (H); leave both parts loose.
3. Using two machine screws (not provided), temporarily fasten crossbar (B) to the electric box.

NOTE: A NEW ELECTRIC BOX COMES WITH SCREWS. WHEN REPLACING A FIXTURE, RETAIN THE EXISTING SCREWS FOR USE WITH THE NEW FIXTURE.

4. Adjust the length of threaded nipple (D) in crossbar (B) so that canopy ring (F) will hold canopy (G) against the ceiling with no threads showing for best appearance. When the correct adjustment is established, tighten jam nut (C) against crossbar (B) to secure the adjustment.
5. Remove crossbar (B) from the electrical box and proceed with the assembly instructions.
6. Locate fixture pipes (I, J, K), Fixture (A), stem nipples (L) . Stem nipples (L) can be found in the kit bag.
7. Provided are multiple fixture pipes in three different lengths. Choose the combination that will achieve the overall height desired. Refer to the table below to determine the pipes required to reach the desired overall height. Once you have determined the components necessary, feed the wires that exit fixture (A) through the individual components and thread pipes and nipples together. Wires will slip easier through loose components than through pipes and nipples that are pre-assembled. Once wires are run, apply thread locking compound to all the connection points and assemble the pipes and nipples.

		Overall Height of Fixture							
		36.4	39.4	42.4	45.4	48.4	51.4	54.4	57.4
# of Pipes Required	3" Pipe (I)		1		1		1		1
	6" Pipe (J)			1	1			1	1
	12" Pipe (K)	2	2	2	2	3	3	3	3

NOTE: APPLICATION OF THE THREAD LOCKING COMPOUND IS NECESSARY TO PREVENT THE PIPE FROM LOOSENING DURING REGULAR MAINTENANCE AND CLEANING OF THE FIXTURE. BE CERTAIN TO APPLY THE COMPOUND.

8. Carefully slide spacer (M), canopy ring (F) and canopy (G) over wires and fixture pipes (I, J, K) until they rest on fixture (A).
9. Slip wires from the fixture (A) through assembled swivel (H) and threaded nipple (D).
10. Refer to instructions on next page to continue installation.



HUBBARDTON FORGE.

MODERN AMERICAN BLACKSMITHS | FINE, HAND CRAFTED LIGHTING
CASTLETON, VERMONT USA | HUBBARDTONFORGE.COM

52603

3 OF 8

ASSEMBLY & INSTALLATION INSTRUCTIONS

A949

Exos Double Shade Pendant 194642


11. Using two machine screws (not provided), fasten crossbar (B) to the electric box.
12. Using suitable wire connectors (not provided) connect fixture wires to supply (white/ribbed to white and black/smooth to black). Attach a pigtail lead to crossbar ground screw (E). Hold canopy (G) close, connect all ground wires (bare copper or green to bare copper or green).

CAUTION: MAKE SURE WIRE CONNECTORS ARE TWISTED ON SECURELY, AND NO BARE WIRE IS EXPOSED.

13. Slide canopy (G) against ceiling, and secure with canopy ring (F).

CAUTION: BE SURE NO WIRES ARE PINCHED BETWEEN CANOPY (G2) AND THE CEILING.

14. Refer to instructions on next page to install shade.

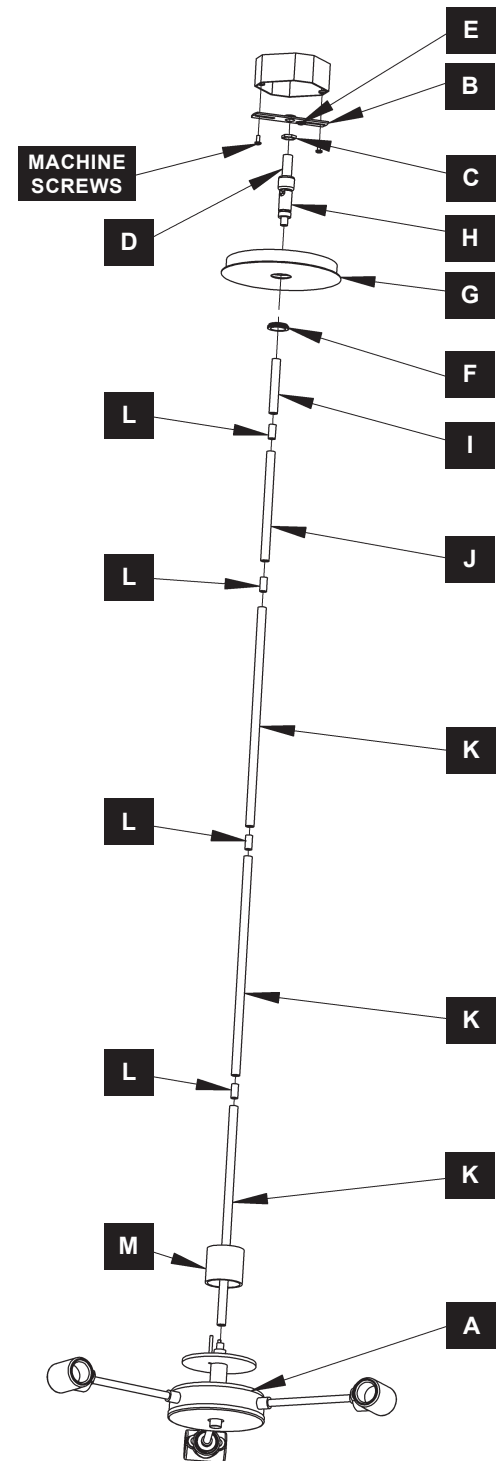

(Figure 1)



HUBBARDTON FORGE.

MODERN AMERICAN BLACKSMITHS | FINE, HAND CRAFTED LIGHTING
CASTLETON, VERMONT USA | HUBBARDTONFORGE.COM


52603

4 OF 8

Exos Double Shade Pendant 194642

Install Inner Shade (Figures 2,3 & 4)

1. Lift spacer (M) up off of fixture (A). Move inner spider assembly (O) up and over fixture (A) and slip over studs (Q). Secure with hex nuts (R).
2. Place spacer (M) on top of inner spider assembly (O).
3. Install Inner shade (P) by orienting per Figure 3 and slipping over inner spider assembly (O). It might be necessary to flex the shade slightly to clear all three support arms. See Figure 3.
4. Lower inner shade (P) until it rests in the support arms (N) of inner spider assembly (O). See Figure 4.

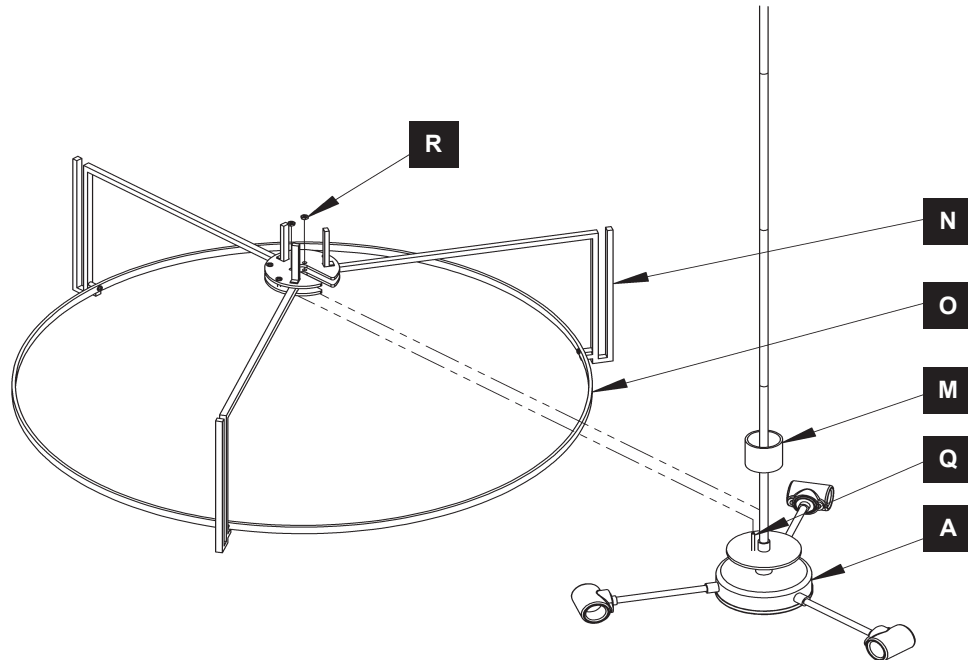

(Figure 2)




HUBBARDTON FORGE.

MODERN AMERICAN BLACKSMITHS | FINE, HAND CRAFTED LIGHTING
CASTLETON, VERMONT USA | HUBBARDTONFORGE.COM


ASSEMBLY & INSTALLATION INSTRUCTIONS

A949

Exos Double Shade Pendant 194642

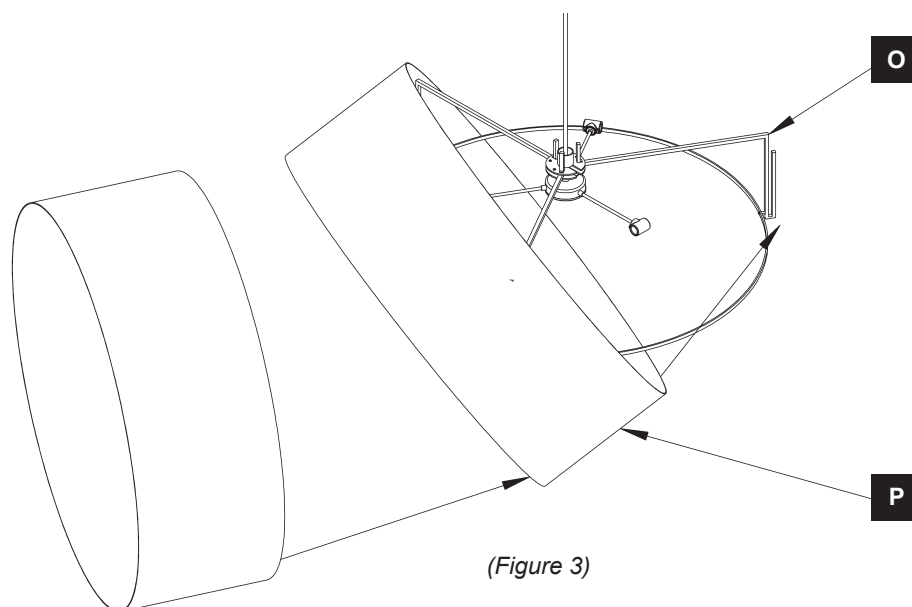

(Figure 3)

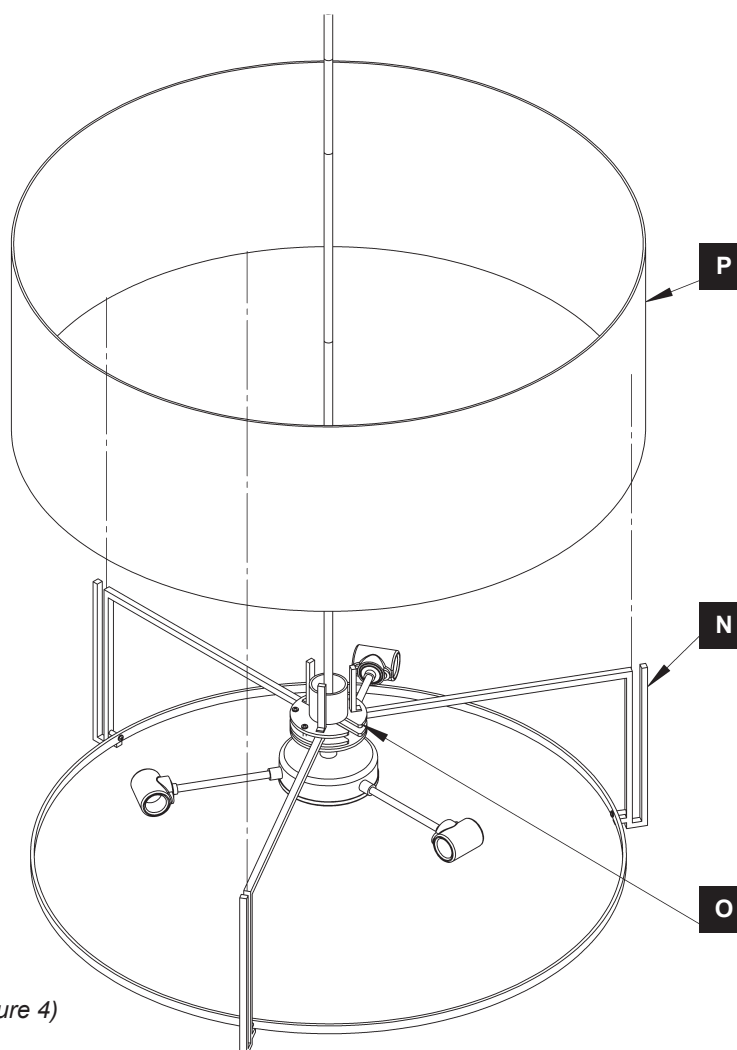

(Figure 4)



HUBBARDTON FORGE.

MODERN AMERICAN BLACKSMITHS | FINE, HAND CRAFTED LIGHTING
CASTLETON, VERMONT USA | HUBBARDTONFORGE.COM



52603

6 OF 8

Exos Double Shade Pendant 194642

Install Outer Shade (Figures 5, 6 & 7)

1. Align outer spider assembly (U) so square openings line up with vertical uprights on fixture (V) (Figure 5).
2. Lower outer spider assembly (U) onto vertical uprights until it is resting on spacer (M) (Figure 5).
3. Install outer shade (S) by orienting per Figure 6 and slipping over outer spider assembly (U). It might be necessary to flex the shade slightly to clear all three support arms.
4. Lower outer shade (S) until it rests in the support arms (T) of outer spider assembly (U).
5. Install light bulbs. (Not included)

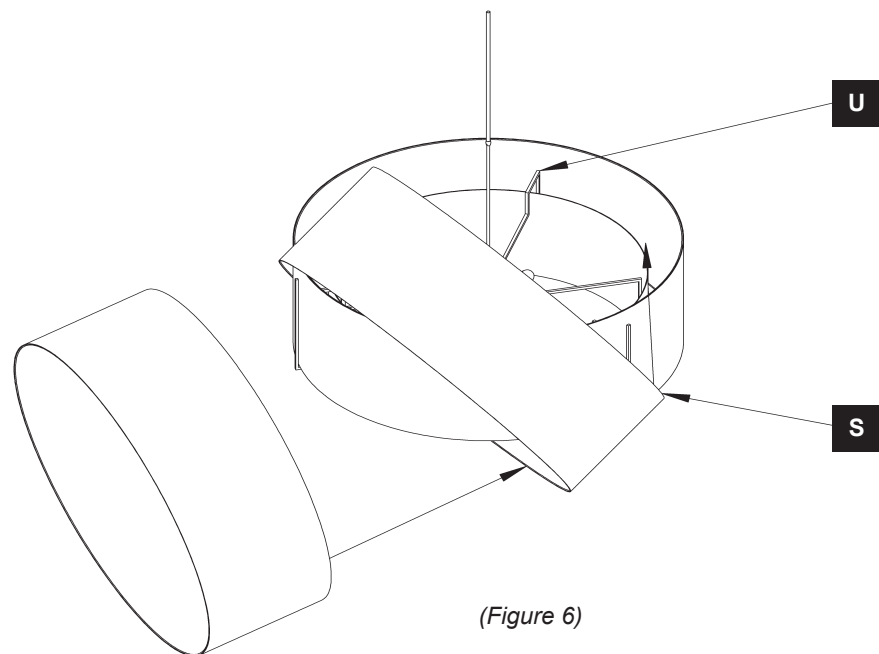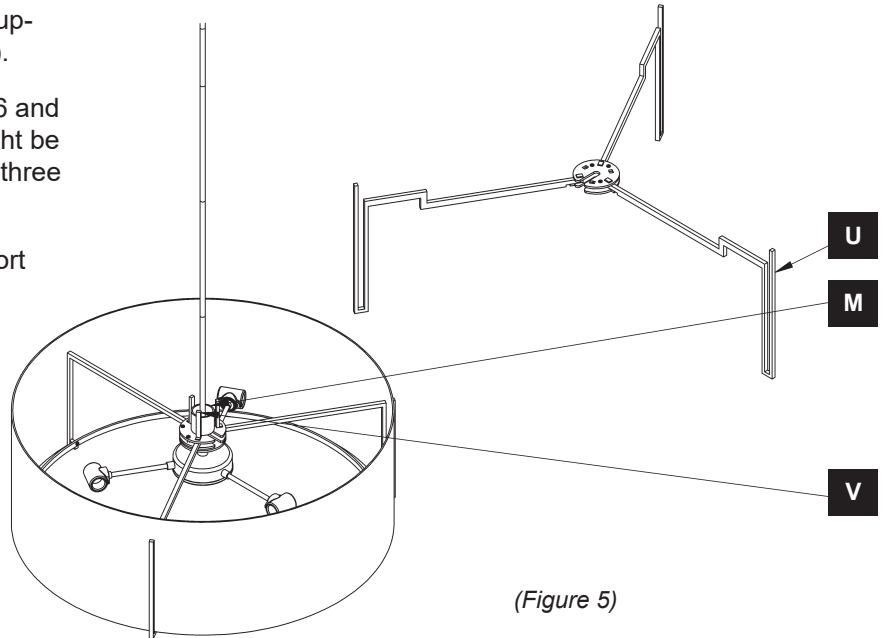

HUBBARDTON FORGE.

MODERN AMERICAN BLACKSMITHS | FINE, HAND CRAFTED LIGHTING
CASTLETON, VERMONT USA | HUBBARDTONFORGE.COM


ASSEMBLY & INSTALLATION INSTRUCTIONS

A949


Exos Double Shade Pendant 194642

Install Diffuser (Figure 8)

1. Slip diffuser (W) up at an angle into center of fixture. It may be necessary to flex diffuser to clear inner spider.
2. Lower until diffuser (W) rests on diffuser support (X).
3. Restore electricity at main breaker box.

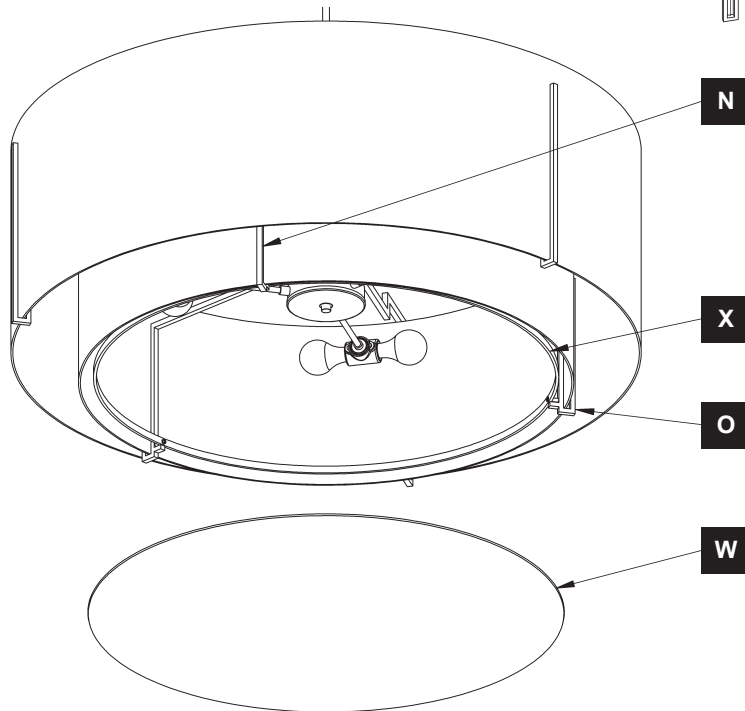

(Figure 8)

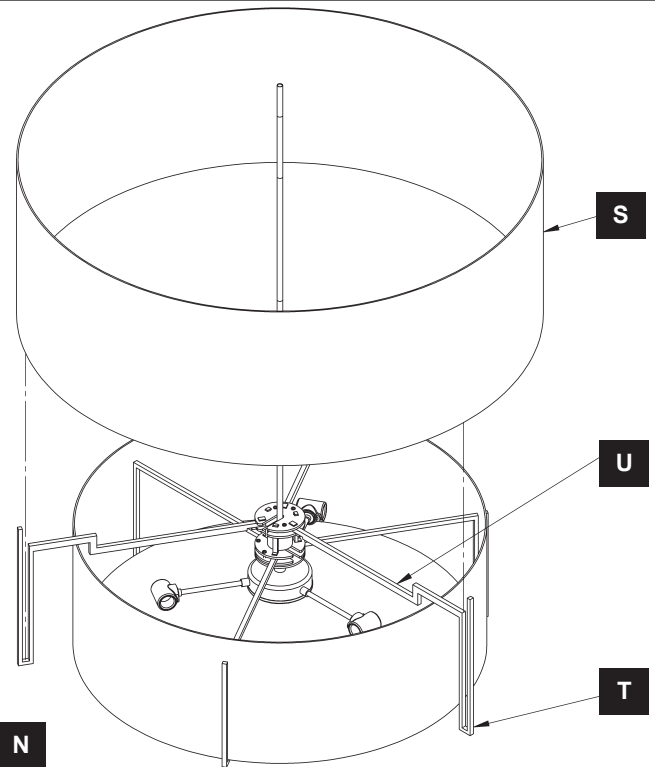

(Figure 7)

If you need further assistance, or find that you are missing any parts, please contact the dealer from which you purchased this product. We hope you enjoy your fixture!

*** Hubbardton Forge will not be liable for injury or damage caused by improper installation, lamping or use of this fixture.**