

Banded Outdoor Sconce w/ Top Plate 3059899 and 305999



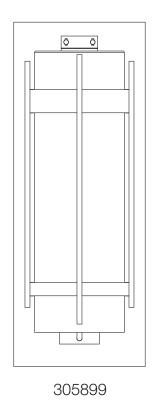

305999 (Shown in Illustrations)

ASSEMBLY & INSTALLATION INSTRUCTIONS

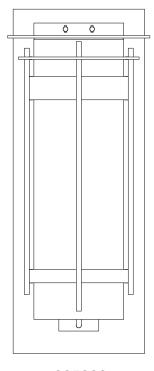

Banded Outdoor Sconce w/ Top Plate 3059899 and 305999

Component Parts

Α	Fixture
---	----------------

B Crossbar

C Ground Screw

D #8 Screw (2)

E Caulking Lip

F O-ring (2)

G Inner Glass

H Outer Glass

I Top Plate

J Thumb Screw (2)

ASSEMBLY & INSTALLATION INSTRUCTIONS



Banded Outdoor Sconce w/ Top Plate 3059899 and 305999

CAUTION: FAILURE TO INSTALL THIS FIXTURE PROPERLY MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH AND PROPERTY DAMAGE. We recommend installation by a licensed electrician. This product must be installed in accordance with applicable installation code(s), by a person familiar with the construction and operation of the product and the hazards involved.*

Caution: Do not exceed maximum wattage noted on fixture. Use only recommended bulbs with fixture.

Please Note: After installation extra hardware and accessories are possible; our kits are used on multiple products and options.

To Install Fixture (Figures 1, 2 on next page)

CAUTION: BE SURE POWER IS OFF AT THE MAIN BREAKER BOX PRIOR TO INSTALLATION.

- 1. Carefully unpack the fixture (A) from the carton.
- 2. Using two machine screws (not provided) attach crossbar (B) to the electrical box so that holes in the crossbar (B) to align with fixture (Figure 1).

Note: A new electric box comes with screws. When replacing a fixture, retain the existing screws for use with the new fixture.

- 3. Using ground screw (C), secure a pigtail lead to the crossbar (B).
- 4. Hold the fixture (A) close to the crossbar (B), using suitable wire connectors (not provided), connect fixture wires to supply wire (white to white and black to black). Connect all ground wires (bare copper or green to bare copper or green).

CAUTION: MAKE SURE WIRE CONNECTORS ARE TWISTED ON SECURELY AND NO BARE WIRES ARE EXPOSED.


- 5. Apply a generous bead of a suitable caulking material (not provided) to caulking lip (E) on the fixture. Caulk should be applied around the entire perimeter of the backplate (Figure 2).
- 6. Carefully tuck all wires behind fixture (A) and inside crossbar (B). Place fixture firmly onto crossbar and fasten with two #8 screws (D).

Note: Be sure no wires are pinched between the wall and fixture.

- 7. Install bulb (not provided) into socket.
- 8. Place two o-rings (F) (found in kit bag) around inner glass (G) (Figure 1). Slide inner glass (G) over bulb into cup.
- 9. Place outer glass (H) over inner glass (G) until it rests on plate.
- 10. Secure top plate (I) on top of outer glass (H) using thumb screws (J).
- 11. Restore electricity at main breaker



Banded Outdoor Sconce w/ Top Plate 3059899 and 305999

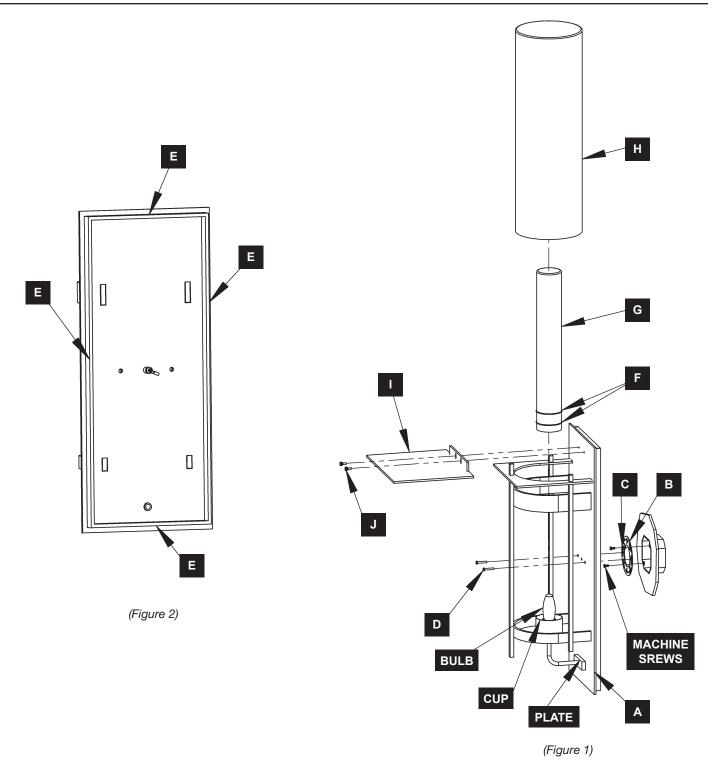

If you need further assistance, or find that you are missing any parts, please contact the dealer from which you purchased this product. We hope you enjoy your fixture!

* Hubbardton Forge will not be liable for injury or damage caused by improper installation, lamping or use of this fixture.

